

XX249-30-00

Cruiser™ SN663V Outdoor PTZ Network Camera Dome



Vicon Industries Inc.

Tel: 631-952-2288 Fax: 631-951-2288 Toll Free: 800-645-9116

24-Hour Technical Support: 800-34-VICON (800-348-4266) UK: 44/(0) 1489-566300


Vicon Industries Inc. does not warrant that the functions contained in this equipment will meet your requirements or that the operation will be entirely error free or perform precisely as described in the documentation. This system has not been designed to be used in life-critical situations and must not be used for this purpose.

www.vicon-security.com


WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. DO NOT INSERT ANY METALLIC OBJECTS THROUGH THE VENTILATION GRILLS OR OTHER OPENINGS ON THE EQUIPMENT.

CAUTION

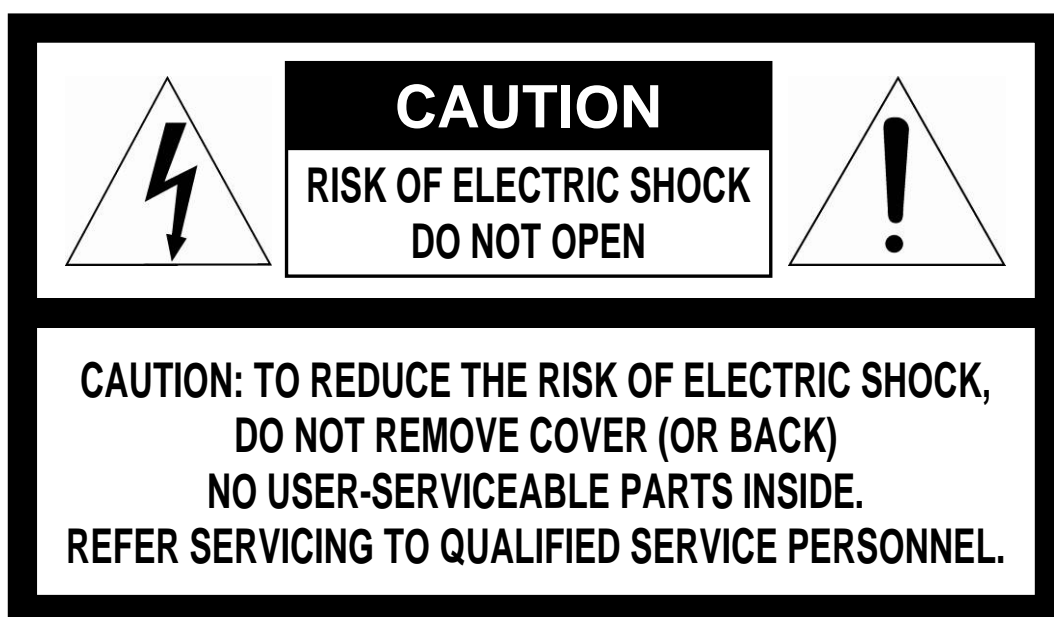

EXPLANATION OF GRAPHICAL SYMBOLS

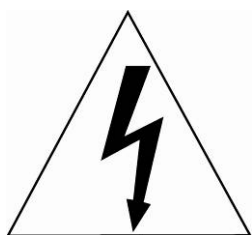

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

FCC COMPLIANCE STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC INFORMATION: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

CE COMPLIANCE STATEMENT

WARNING

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **CAUTION – THESE SERVICING INSTRUCTIONS ARE FOR USE BY QUALIFIED SERVICE PERSONNEL ONLY. TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT PERFORM ANY SERVICING OTHER THAN THAT CONTAINED IN THE OPERATING INSTRUCTIONS UNLESS YOU ARE QUALIFIED TO DO SO.**
16. **Use satisfy clause 2.5 of IEC60950-1/UL60950-1 or Certified/Listed Class 2 power source only.**
17. ITE is to be connected only to PoE networks without routing to the outside plant.



TABLE OF CONTENTS

1. Description	7
1.1 Components	7
1.2 Key Features	8
2. Installation	9
2.1 Installation Details	9
2.2 Basic Configuration of Camera System	11
2.3 Connections	12
2.4 Network Connection & IP assignment	13
3. Operation	14
3.1 Access from a browser	14
3.2 Access from the internet	15
3.3 Setting the admin password over a secure connection	15
3.4 Live View Page	15
3.5 Network Camera Setup	17
3.5.1 Basic Configuration	17
1) Users	18
2) Network	19
3) Video & Image	20
4) Audio	22
5) Date & Time	23
3.5.2 Live View, Source	24
3.5.3 Video & Image	24
1) Basic	24
2) Image	25
3) Auto Exposure	26
4) Day & Night	28
5) Auto Focus	29
6) DIS	30
7) Webcasting	31
3.5.4 Audio	32
3.5.5 Event	32
1) Event In	32
2) Event Out	37
3) Event Map	43
3.5.6 Dome Configuration	45
1) Preset	45

2) Tour	46
3) Motor Setup	47
4) RS485	48
5) View Angle	49
6) System Menu	50
7) Privacy Zone.....	51
3.5.7 System	52
1) Information	52
2) Security.....	53
3) Date & Time	56
4) Network.....	57
5) Language	67
6) Maintenance	68
7) Support	69
3.6 Help.....	71
3.7 Resetting to the factory default settings.....	71
4. Appendix	72
4.1 Troubleshooting	72
4.2 Alarm Connection	73
4.3 Preventive Maintenance	73
4.4 Product Specification	74
4.5 System Requirement for Web Browser	77
4.6 General Performance Considerations.....	77
Shipping Instructions	78
Vicon Standard Equipment Warranty.....	79

1. Description


The SN663V network camera is an outdoor PTZ camera dome that includes a 1080p high resolution camera lens combination that provides video transmission over a network. It is fully featured for security surveillance and remote monitoring needs.

The network camera supports H.264 compression technology as well as M-JPEG compression. By using its dedicated program, multiple users are able to have access to the network camera simultaneously or a single user can monitor various network cameras at the same time. It also enables users to play, store and retrieve a monitoring image by using a PC. All the settings and real-time monitoring screens are provided through access to the web.

1.1 Components

The camera is designed to be a compact small size with a hard dome camera housing constructed of aluminum, steel and plastic. The housing is designed to be mounted on a wall or a ceiling. The housing meets the Protection Classification IP66 standards for dust and moisture resistance.

* Dome Camera	1
* Installation Guide/CD	1
* Template Sheet	1
* Mounting Bracket	1
* Safety Lanyard	1
* Accessory Kit	1
1) Mounting screws (PH6 x 35.0)	(4)
2) Plastic anchors	(4)
3) O-Rings	(4)
4) Torx wrench	(1)
* Accessory Connector	1
1) 3-pin terminal block	(1)
2) 6-pin terminal block	(1)

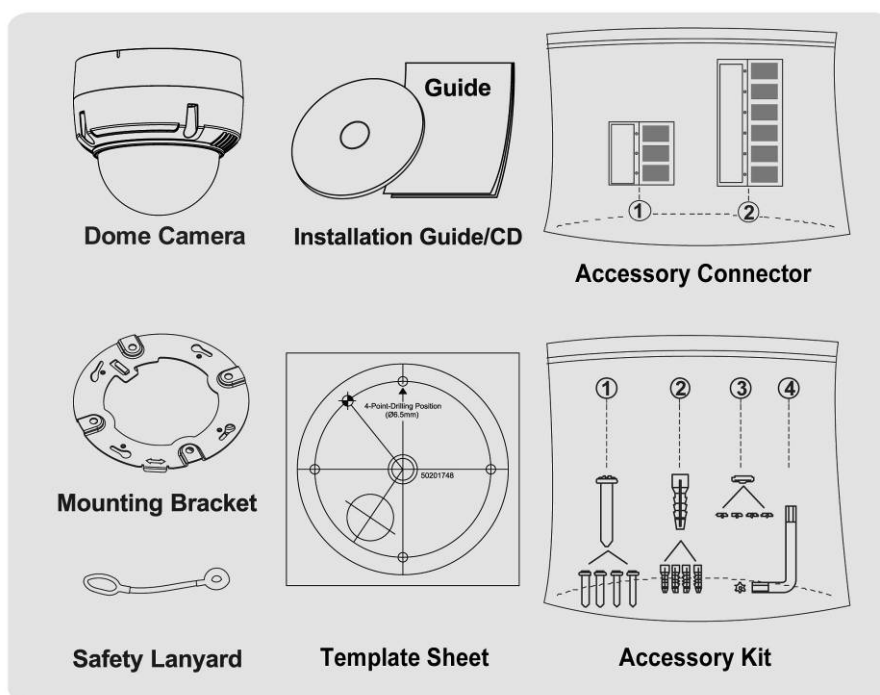

1.2 Key Features

- **Brilliant Video Quality**

The network camera offers the highly efficient H.264 video compression, which drastically reduces bandwidth and storage requirements without compromising image quality. Motion JPEG is also supported for increased flexibility.

- **Triple Streams**

The network camera can deliver triple video streams simultaneously at full frame rate in all resolutions up to 1920 x 1080 using Motion JPEG (M-JPEG) and H.264. This means that several video streams can be configured with different compression formats, resolutions and frame rates for different needs.

- **Image Setting Adjustment**

The network camera enables users to adjust image settings such as contrast, brightness and saturation to improve images before encoding takes place.

- **Intelligent Video Capabilities**

The network camera includes intelligent capabilities such as enhanced video motion detection. The network camera's external inputs and outputs can be connected to devices such as sensors and relays, enabling the system to react to alarms and activate lights or open/close doors.

- **Improved Security**

The network camera logs all user access and lists currently connected users. Also, its full frame rate video can be provided over HTTPS.

- **PoE (Power over Ethernet)**

This network camera can be powered through PoE, which simplifies installation, since only one cable is needed for carrying power as well as video controls.

- **ONVIF Certificate**


ONVIF is a global interface standard that makes it easier for end users, integrators, consultants, and manufacturers to take advantage of the possibilities offered by network video technology. ONVIF enables interoperability between different vendors' products, providing increased flexibility, reduced cost, and future-proof systems.

2. Installation

2.1 Installation Details

The dome camera is for use in surface or pendant mounting applications; the mounting location and material must be capable of supporting loads of up to 4.4 lb (2.0 kg). (Pendent mounting must use pendent mount accessory.)

The dome camera's mounting bracket should be attached to a structural object, such as hard wood, wall stud or ceiling rafter that supports the weight of the dome camera.

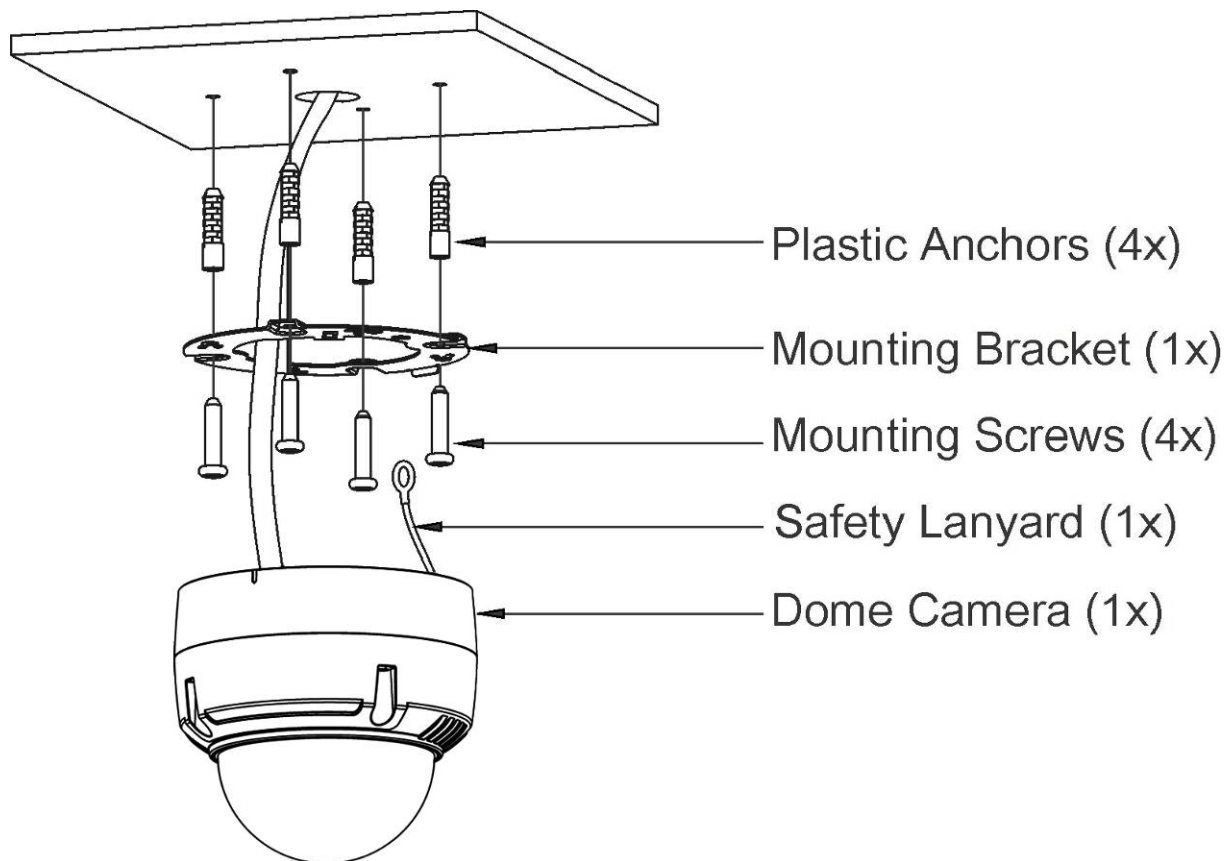

CAUTION: A silicone rubber sealant (customer provided) must be applied to seal the housing to secure waterproofing.

2.1.1 Locking Dome Camera

- Make screw holes on the ceiling using the supplied mounting Template Sheet (Figure A).
- Secure the provided Mounting Bracket to the ceiling using supplied Anchors (4x) and Mounting Screws (4x) (Figure B).
- Attach the Safety Lanyard to the Safety Lanyard Hook of the Mounting Bracket (Figure C).
- Align the locking tab on the bracket and the locking slot on the base of the dome (Figure D).
- Turn the dome counterclockwise approximately 10 degree to the locked position (Figure E).

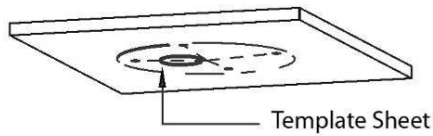


Figure A

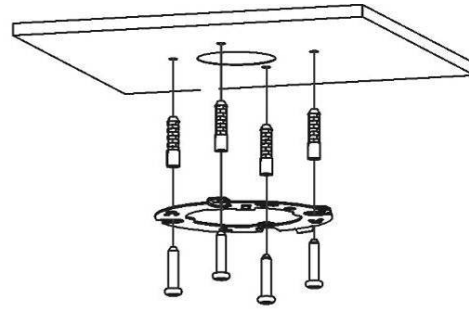


Figure B

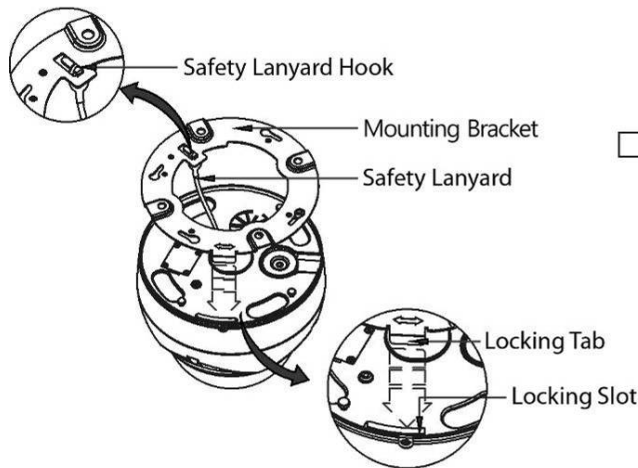


Figure C

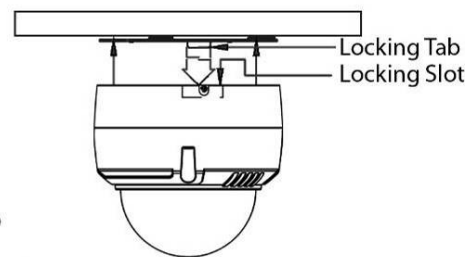


Figure D

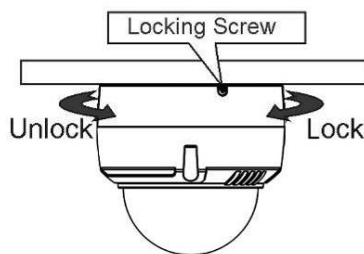


Figure E


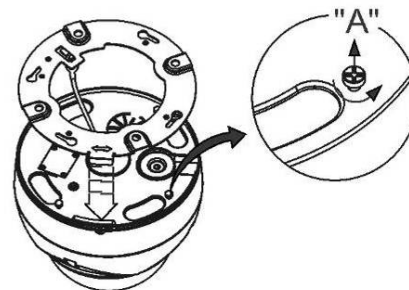


Figure F

CAUTION: Before installing the mounting bracket to surface, pre-adjust the four mounting screws "A" on the base of the dome camera to best match the mounting bracket locked position. Unscrew the locking screw on the side of the dome's base and fit the tab of the mounting bracket into the locking slot. Screws "A" should not be too tight or too loose when the dome is in the locked position. After setting the proper positions of screws "A," remove the mounting bracket and install it to the mounting surface. If it is too difficult to lock the dome in position after the mounting bracket has been installed readjust the screws "A" by unscrewing them a small amount and try to install dome camera again.

2.2 Basic Configuration of Camera System

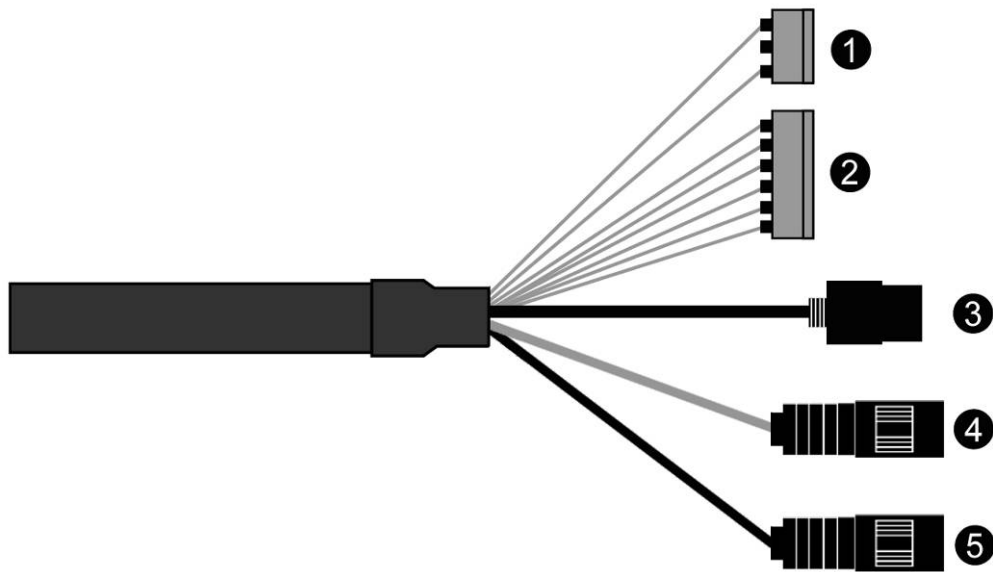

No.	Connector	Wire Color	Description
1	3-pin terminal block	RED	24 VAC or 12 VDC+
		WHITE	24 VAC or 12 VDC-
2	6-pin terminal block	PINK	GND
		GRAY	ALARM INPUT
		BROWN	GND
		YELLOW	ALARM OUTPUT
		GREEN	RS485+
		BLUE	RS485-
3	RJ-45	BLACK	Ethernet, RJ-45 port compatible with 10/100Mbps having PoE functionality.
4	STEREO	GRAY	AUDIO OUTPUT
5	STEREO	BLACK	AUDIO INPUT

The camera must be installed by qualified service personnel in accordance with all local and federal electrical and building codes.

2.3 Connections

- **Connecting the Network**

Connect a standard RJ-45 cable to the network port of the camera. Generally a cross-over cable is used for direct connection to a PC, while a direct cable is used for connection to a hub.

- **Connecting Alarms**

- **AI (Alarm Input)**

You can use external devices to signal the camera to react upon events. Mechanical or electrical switches can be wired to the AI (Alarm Input) and G (Ground) connectors.

- **G (Ground)**

NOTE: All the connectors marked G or GND are common.

Connect the ground side of the alarm input and/or alarm output to the G (Ground) connector.

- **AO (Alarm Output)**

The camera can activate external devices such as buzzers or lights. Connect the device to the AO (Alarm Output) and G (Ground) connectors.

- **Connecting to the RS485**

The camera can be controlled remotely by an external device or control system, such as a control keyboard, using RS485 half-duplex serial communications signals.

- **Connecting the Power**

Connect power of 12 VDC or 24 VAC 1.5 A for the camera.

When using a 12 VDC adapter, connect the positive (+) pole to the '+' position and the negative (-) pole to the '-' position.

Use satisfy clause 2.5 of IEC60950-1/UL60950-1 or Certified/Listed Class 2 power source only.


- Be careful not to reverse the polarity when connecting the power cable.
- A router featuring PoE (Power over Ethernet) can be used to supply power to the camera.
- If PoE and 12 VDC are both applied, this camera will be supplied with power from PoE.
- 24 VAC is recommended to use for the camera power for stable operation with heater kit.
If using PoE, the heater will not operate at all.

2.4 Network Connection & IP assignment


The network camera is designed for use on an Ethernet network and requires an IP address for access. Most networks today have a DHCP server that automatically assigns IP addresses to connected devices. By the factory default, your camera is set to obtain the IP address automatically via DHCP server. If your network does not have a DHCP server the network camera will use 192.168.1.100 as the default IP address.

If DHCP is enabled and the product cannot be accessed, run the “SmartManager” utility on the CD to search and allocate an IP address, or reset the product to the factory default settings and then perform the installation again.


- 1) Connect the network camera/device to the network and power up.
- 2) Start SmartManager utility (Start > All programs > SmartManager > SmartManager). The main window will display, and after a short while any network devices connected to the network will be displayed in the list.

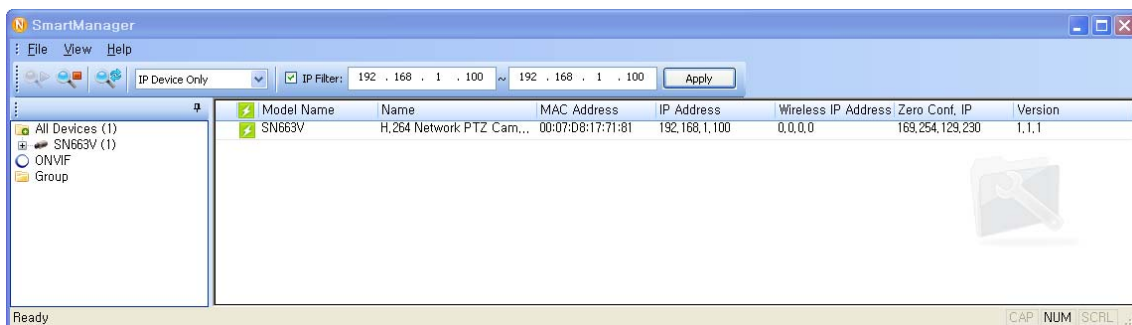

- 3) Select the camera on the list and click right button of the mouse. The pop-up menu displays as below.

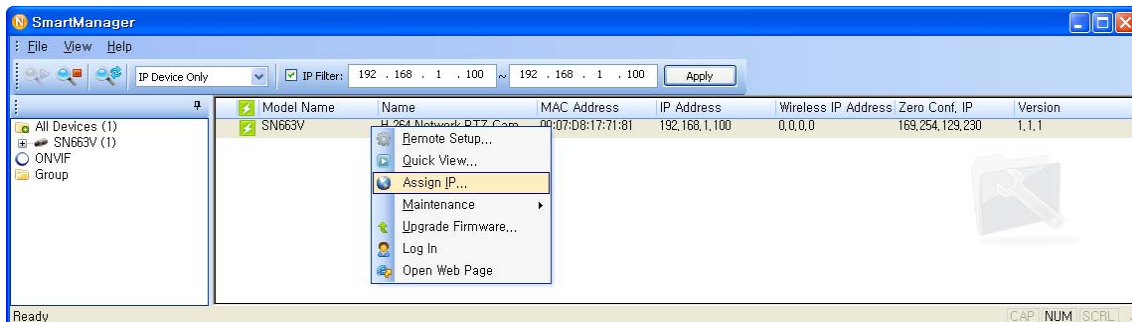

- 4) Select Assign IP Address. The Assign IP window will display. Enter the required IP address.

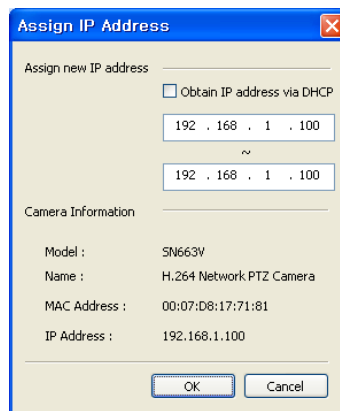

NOTE: For more information, refer to the SmartManager User's Manual.

3. Operation

The network camera can be used with Windows® operating system and browsers. The recommended browsers are Internet Explorer®, Safari®, Firefox®, Opera™ and Google® Chrome® with Windows.


NOTE: To view streaming video in Microsoft Internet Explorer, set your browser to allow ActiveX controls.

3.1 Access from a browser

- 1) Start a browser (ex., Internet Explorer).
- 2) Enter the IP address or host name of the network camera in the Location/Address field of your browser.
- 3) A starting page displays. Click **Live View** or **Setup** to enter web page.



- 4) The network camera's **Live View** page appears in your browser.

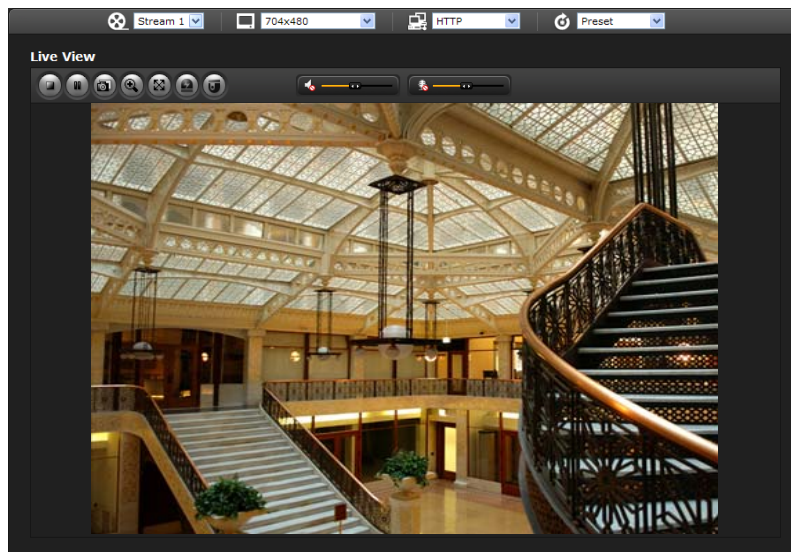

3.2 Access from the internet

Once connected, the network camera is accessible on your local network (LAN). To access the network camera from the Internet you must configure your broadband router to allow incoming data traffic to the network camera. To do this, enable the NAT traversal feature, which will attempt to automatically configure the router to allow access to the network camera. This is enabled from Setup > System > Network > NAT. For more information, refer to section “3.5.7 System > Network > NAT”.

3.3 Setting the admin password over a secure connection

To gain access to the product, the password for the default administrator user must be set. This is done in the “Admin Password” dialog, which is displayed when the network camera is accessed for the setup at the first time. Enter your admin name and password, set by the administrator.



NOTE: The default user name is ADMIN and the default password is 1234. If the password is lost, the network camera must be reset to the factory default settings. Refer to “Resetting to the factory default settings.”


To prevent network eavesdropping when setting the admin password, this can be done via an encrypted HTTPS connection, which requires an HTTPS certificate (see **NOTE** below).

To set the password via a standard HTTP connection, enter it directly in the first dialog shown below. To set the password via an encrypted HTTPS connection, see “3.5.7 System > Security > HTTPS”.

NOTE: HTTPS (Hypertext Transfer Protocol over SSL) is a protocol used to encrypt the traffic between web browsers and servers. The HTTPS certificate controls the encrypted exchange of information.

3.4 Live View Page

The Live View page offers several screen modes: 1920x1080, 1280x1024, 1280x720, 704x576, 704x480, 640x480 and 320x240. Users can select the most suitable of these modes. Adjust the mode in accordance with your PC specifications and monitoring purposes.

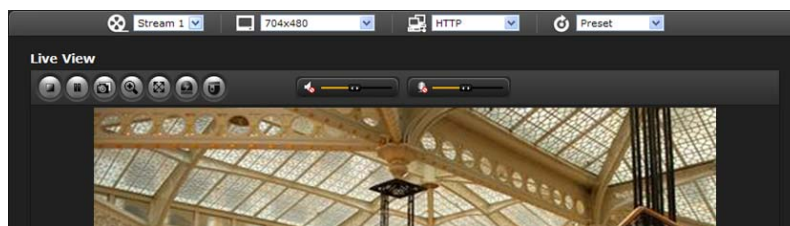

1) General controls




Live View Page




Setup Page




Help Page

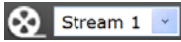


The video drop-down list allows the selection of a customized or pre-programmed video stream on the Live View page. Stream profiles are configured under Setup > Basic Configuration > Video & Image. For more information, see “3.5.1 Basic Configuration > Video & Image”.

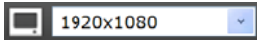

The resolution drop-down list allows the selection of the most suitable video resolution to be displayed on Live View page.

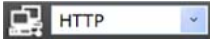

The protocol drop-down list allows the selection of which combination of protocols and methods to use depending on your viewing requirements, and on the properties of your network.

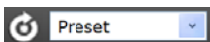

The preset drop-down list allows the selection of the preset number for the PTZ camera being used. This icon is inactivated if the PTZ settings are not set.

2) Control toolbar

The live viewer toolbar is available in the web browser page only. It displays the following buttons:



The **Stop** button stops the video stream being played. Pressing the key again toggles the start and stop. The **Start (Play)** button connects to the network camera or starts playing a video stream.



The **Pause** button pauses the video stream being played.



The **Snapshot** button takes a snapshot of the current image. The location where the image is saved can be specified.



The **Digital Zoom** button activates a zoom-in or zoom-out function for video image on the live screen.



The **Full Screen** button causes the video image to fill the entire screen area. No other windows will be visible. Press the 'Esc' button on the computer keyboard to cancel full screen view.



The **Manual Trigger** button activates a pop-up window to manually start or stop the event.



The **PTZ** button activates a pop-up window for Pan, Tilt and Zoom control.



Use this scale to control the volume of the speakers.



Use this scale to control the volume of the microphone.

3) Video Streams

The network camera provides several images and video stream formats. Your requirements and the properties of your network will determine the type you use.

The Live View page in the network camera provides access to H.264 and Motion JPEG video streams, and to the list of available video streams. Other applications and clients can also access these video streams/images directly, without going via the Live View page.

3.5 Network Camera Setup

This section describes how to configure the network camera, and is intended for product Administrators, who have unrestricted access to all the Setup tools; and Operators, who have access to the settings for Basic Configuration, Live View, Video & Image, Audio, Event, Dome Configuration, and System. The configuration categories are displayed along the left side of the screen. Click on the category to be configured; the name will turn yellow and that configuration screen will display.

You can configure the network camera by clicking Setup in the top right-hand corner of the Live View page. Click on the question mark to access the online help that explains the setup tools.


When accessing the network camera for the first time, the “Admin Password” dialog appears. Enter your admin name and password, set by the administrator.



NOTE: If the password is lost, the network camera must be reset to the factory default settings. Refer to “Resetting to the Factory Default Settings”. The default user name is ADMIN and the default password is 1234.


3.5.1 Basic Configuration

The device information is displayed on the Basic Configuration page.

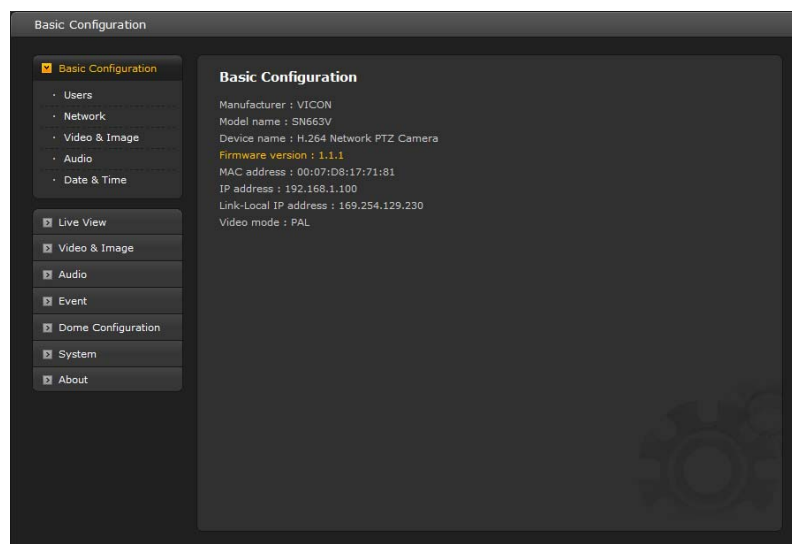

1) Users

User access control is enabled by default. An administrator can set up other users, by giving these user names and passwords. It is also possible to allow anonymous viewer login, which means that anybody may access the Live View page, as described below:

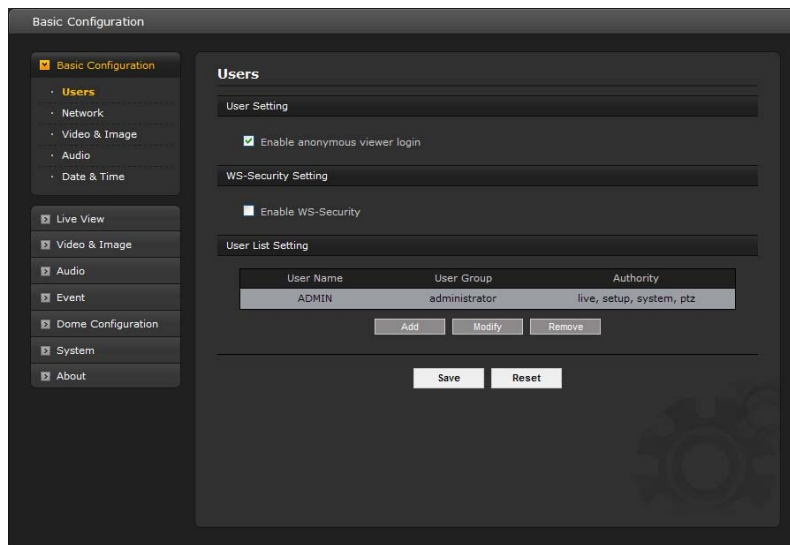

The **user list** displays the authorized users and user groups (levels):


User Group	Authority
Guest	Provides the lowest level of access, which only allows access to the Live View page.
Operator	An operator can view the Live View page, create and modify events, and adjust certain other settings. Operators have no access to System Options.
Administrator	An administrator has unrestricted access to the Setup tools and can determine the registration of all other users.

- **Enable anonymous viewer login:** Check the box to use the webcasting features. Refer to "3.5.3 Video & Image" for more details.
- **Enable WS-Security:** Do not check this box to connect and monitor the network camera through Vicon's viewing software using drivers older than 935.

NOTE: WS-Security is an open format for signing and encryption of message parts, for supplying credentials in the form of security tokens, and for security passing those tokens in a message.

2) Network

The network camera supports both IP version 4 and IP version 6. Both versions may be enabled simultaneously, and at least one version must always be enabled. When using IPv4, the IP address for the network camera can be set automatically via DHCP, or a static IP address can be set manually. If IPv6 is enabled, the network camera receives an IP address according to the configuration in the network router. There is also the option of using the Internet Dynamic DNS Service. For more information on setting the network, refer to “3.5.7 System > Network > Basic”.

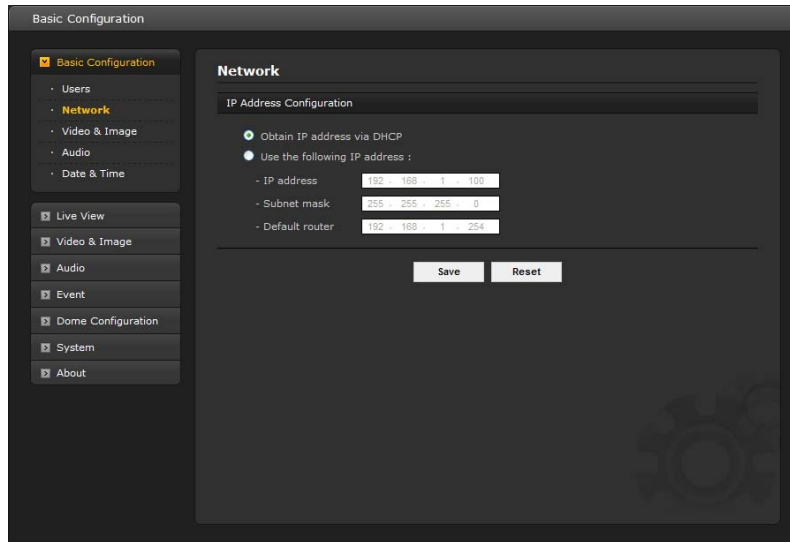

- **Obtain IP address via DHCP:** Dynamic Host Configuration Protocol (DHCP) is a protocol that lets network administrators centrally manage and automate the assignment of IP addresses on a network. DHCP is enabled by default. Although a DHCP server is mostly used to set an IP address dynamically, it is also possible to use it to set a static, known IP address for a particular MAC address.
- **Use the following IP address:** To use a static IP address for the network camera, check the radio button and then make the following settings:
 - **IP address:** Specify a unique IP address for your network camera.
 - **Subnet mask:** Specify the mask for the subnet the network camera is located on.
 - **Default router:** Specify the IP address of the default router (gateway) used for connecting devices attached to different networks and network segments.

NOTES:

1. DHCP should only be enabled if using dynamic IP address notification, or if your DHCP server can update a DNS server, which then allows you to access the network camera by name (host name). If DHCP is enabled and you cannot access the unit, you may have to reset it to the factory default settings and then perform the installation again.
2. The ARP/Ping service is automatically disabled two minutes after the unit is started, or as soon as an IP address is set.
3. Pinging the unit is still possible when this service is disabled.

3) Video & Image

Basic Configuration

- Basic Configuration
- Users
- Network
- Video & Image
- Audio
- Date & Time

Live View

Video & Image

Audio

Event

Dome Configuration

System

About

Video & Image

Sensor Setting

Capture mode: 1920x1080 Max., 25fps

Stream 1 Setting

Codec: H.264 Baseline Profile

Resolution: 1920x1080

Bitrate control: CBR

Bitrate: 4000 [kbps]

Framerate: 25

GOP size: 25 [1 ...50]

Stream 2 Setting

Codec: MJPEG

Resolution: 640x480

Framerate: 25

Quality: 50 [1 ...100]

Stream 3 Setting

Codec: H.264 Baseline Profile

Resolution: 640x480

Bitrate control: CBR

Bitrate: 2000 [kbps]

Framerate: 25

GOP size: 25 [1 ...50]

Save Reset

- **Sensor Setting:**

- **Capture mode:** Select video frame rate at either 60/50fps or 30/25fps of resolution 1920x1080.

- **Stream 1 Setting:**

- **Codec:** The codec settings are separated into H.264 profiles. H.264 is also known as MPEG-4 Part 10. This is the new generation compression standard for digital video. This function offers higher video resolution than Motion JPEG or MPEG-4 at the same bit rate and bandwidth, or the same quality video at a lower bit rate.
- **Profile:** There are 3 pre-programmed stream profiles available for quick set-up. Choose the form of video encoding you wish to use from the drop-down list:
 - * **H.264 HP (High Profile):** Primary profile for broadcast and disc storage applications, particularly for high-definition television applications (for example, this is the profile adopted by the Blu-ray Disc storage format and the DVB HDTV broadcast service).
 - * **H.264 MP (Main Profile):** Primary profile for low-cost applications that require additional error robustness, this profile is used rarely in videoconferencing and mobile applications; it does add additional error resilience tools to the Constrained Baseline Profile. The importance of this profile is fading after the Constrained Baseline Profile has been defined.
 - * **H.264 BP (Baseline Profile):** Originally intended as the mainstream consumer profile for broadcast and storage applications, the importance of this profile faded when the High Profile was developed for those applications.
- **Resolution:** This enables users to determine a basic screen size when having access through the Web Browser or PC program. The screen size control comes in seven modes like 1920x1080, 1280x1024, 1280x720, 704x576, 704x480, 640x480 and 320x240.

Users can reset the selected screen size anytime while monitoring the screen on a real-time basis.


- **Bit rate control:** The bit rate can be set as Variable Bit Rate (VBR) or Constant Bit Rate (CBR). VBR adjusts the bit rate according to the image complexity, using up bandwidth for increased activity in the image, and less for lower activity in the monitored area.

CBR allows the setting of a fixed target bit rate that consumes a predictable amount of bandwidth. The bit rate would usually need to increase for increased image activity, but in this case cannot; therefore, the frame rate and image quality are affected negatively. To partly compensate for this, it is possible to prioritize either the frame rate or the image quality whenever the bit rate needs to be increased. Not setting a priority means the frame rate and image quality are equally affected.

- **Bit rate:** When it is necessary to adjust a smooth transmission status according to network situations, users can increase the compressibility to carry out the network transmission stably. Alternatively, when it is necessary to maintain a detailed monitoring screen by enhancing the image quality, users can do so by decreasing the compressibility. In each case, adjust this function according to the network status and monitoring purposes.
- **Frame rate:** Upon the real-time play, users should select a frame refresh rate per second. If the rate is high, the image will become smooth. On the other hand, if the rate is low, the image will not be natural but it can reduce a network load.
- **GOP size:** Select the GOP (Group of Picture) size. If users want to have a high quality of fast image one by one, please decrease the value. For the purpose of general monitoring, do not change a basic value. Such act may cause a problem to the system performance. Vicon recommends that GOP be the same as the fps.
- **Stream 2 Setting:** Sometimes the image size is large due to low light or complex scenery. Adjusting the frame rate and quality helps to control the bandwidth and storage used by the Motion JPEG video stream in these situations. Limiting the frame rate and quality optimizes bandwidth and storage usage, but may give poor image quality. To prevent increased bandwidth and storage usage, the Resolution, Frame rate, and Frame Quality should be set to an optimal value.
 - **MJPEG Resolution:** Same as the stream 1 settings.
 - **MJPEG Frame rate:** Same as the stream 1 settings.
 - **MJPEG Quality:** Select the picture quality. If users want to have a high quality fast image one after the other, decrease the value. For general monitoring purposes, do not change a basic value. Such act may cause a problem to the system performance.
- **Stream 3 Setting:** Same as the Stream 1 Setting.

When satisfied with the settings, click the **Save** button, or click the **Reset** button to revert to previously saved settings.

4) Audio

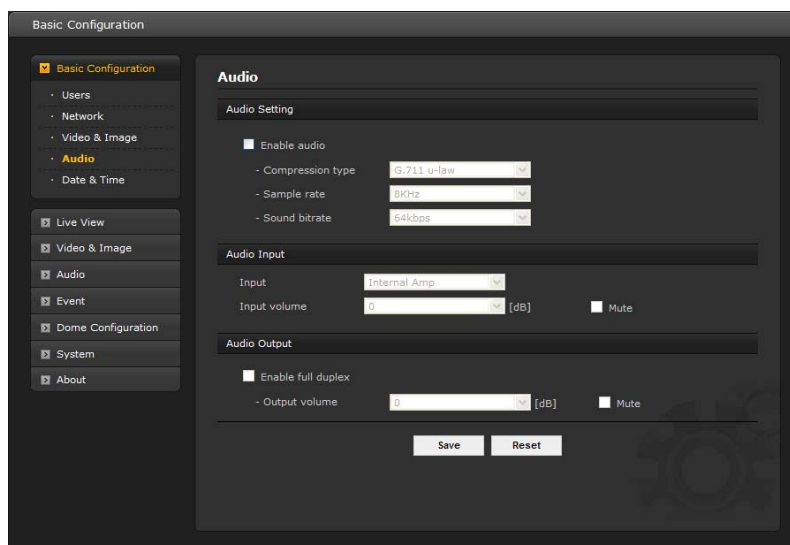

The network camera can transmit audio to other clients using an external microphone and can play audio received from other clients by attaching a speaker. The Setup page has an additional menu item called Audio, which allows different audio configurations, such as full duplex and simplex.

- **Audio Setting:**

- **Enable audio:** Check the box to enable audio in the video stream.
- **Compression type:** Select the desired audio Compression format, G.711. The “u-law” is for North America and Japan; the “a-law” is for Europe and the rest of the world.
- **Sample rate:** Select the required Sample rate (number of times per second the sound is sampled). The higher the sample rate, the better the audio quality and the greater the bandwidth required.
- **Sound bit rate:** Depending on the selected encoding, set the desired audio quality (bit rate). The settings affect the available bandwidth and the required audio quality.

- **Audio Input:** Audio from an external line source can be connected to the STEREO Jack I/O of the network camera.

- **Input volume:** If there are problems with the sound input being too low or high, it is possible to adjust the input gain for the microphone attached to the network camera.

- **Audio Output:**

- **Enable full duplex:** Check the box to enable Full Duplex mode. This means that audio (talk and listen) can be transmitted and received at the same time, without having to use any of the controls. This is just like having a telephone conversation. A Mute button is provided; check the box to hear no sound from the speakers.

This mode requires that the client PC has a sound card with support for full-duplex audio.

- **Output volume:** If the sound from the speaker is too low or high it is possible to adjust the output gain for the active speaker attached to the network camera.

When satisfied with the settings, click the **Save** button, or click the **Reset** button to revert to previously saved settings.

5) Date & Time

The screenshot shows the 'Basic Configuration' window with the 'Date & Time' tab selected. On the left is a sidebar with navigation links: Basic Configuration (selected), Users, Network, Video & Image, Audio, Live View, Video & Image, Audio, Event, Dome Configuration, System, and About. The main content area is titled 'Date & Time' and contains the following sections:

- Current Server Time:** Displays the current date and time. Date: 2013-11-13, Time: 14:09:25.
- New Server Time:**
 - Time zone:** A dropdown menu showing '(GMT) Greenwich Mean Time : Dublin, Edinburgh, Lisbon, London'. Below it is a checkbox for 'Automatically adjusts for daylight saving time changes'.
 - Time mode:** Three radio buttons are present:
 - Synchronize with computer time:** Selected. Date: 2013-11-13, Time: 14:10:55.
 - Synchronize with NTP server:** Unselected. NTP server: time.nist.gov, NTP Interval: 12 [hour].
 - Set manually:** Unselected. Date: 2013-11-13, Time: 14:09:23.
- Date & Time Format:**
 - Date Format:** A dropdown menu showing 'YYYY-MM-DD'.
 - Time Format:** A dropdown menu showing '24 Hour'.

At the bottom of the main content area are two buttons: 'Save' and 'Reset'.


- **Current Server Time:** This displays the current date and time (24h clock). The time can be displayed in 12h clock format (see below).
- **New Server Time:** Select your time zone from the drop-down list. If you want the server clock to automatically adjust for daylight saving time, select “Automatically adjusts for daylight saving time changes”.
From the Time mode section, select the preferred method to use for setting the time:
 - **Synchronize with computer time:** Sets the time from the clock on your computer.
 - **Synchronize with NTP Server:** The video camera will obtain the time from an NTP server every 60 minutes.
 - **Set manually:** Allows you to manually set the time and date.
- **Data & Time Format:** Specify the formats for the date and time (12h or 24h) displayed in the video streams.

Select Date & Time format from the drop-down list.

- **Date Format:** Specify the date format. YYYY: Year, MM: Month, DD: Day
- **Time Format:** Specify the date format. 24 Hour or 12 Hour (AM/PM)

When satisfied with the settings, click the **Save** button, or click the **Reset** button to revert to previously saved settings.

3.5.2 Live View, Source

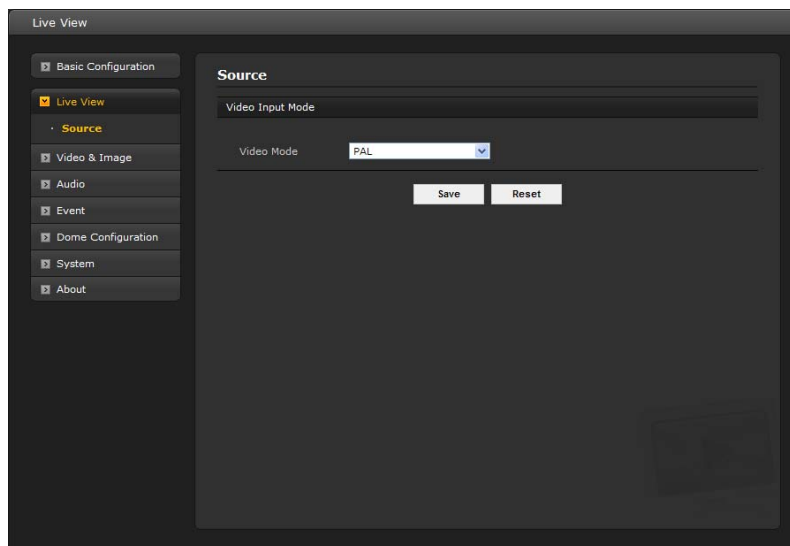

- **Video Input Mode:**


- **Video Mode:** Select the Video Mode from the drop-down list, NTSC or PAL. This defines the video output port for a service monitor.

NOTE: This function may not be applicable, depending on the model.

When satisfied with the settings, click the **Save** button, or click the **Reset** button to revert to previously saved settings.


3.5.3 Video & Image

1) Basic

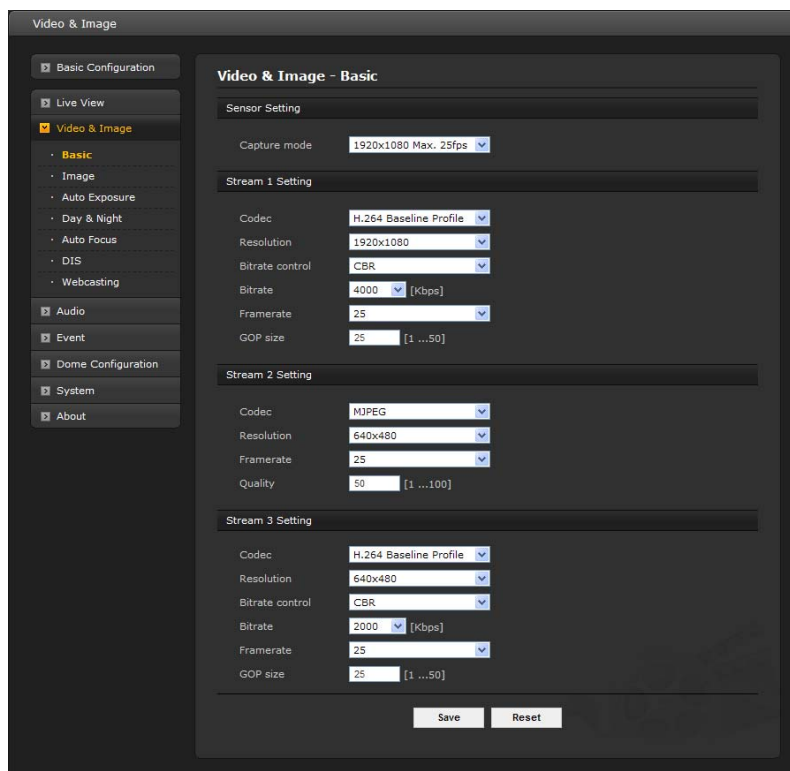

Refer to “3.5.1 Basic Configuration > Video & Image” for more details.

2) Image

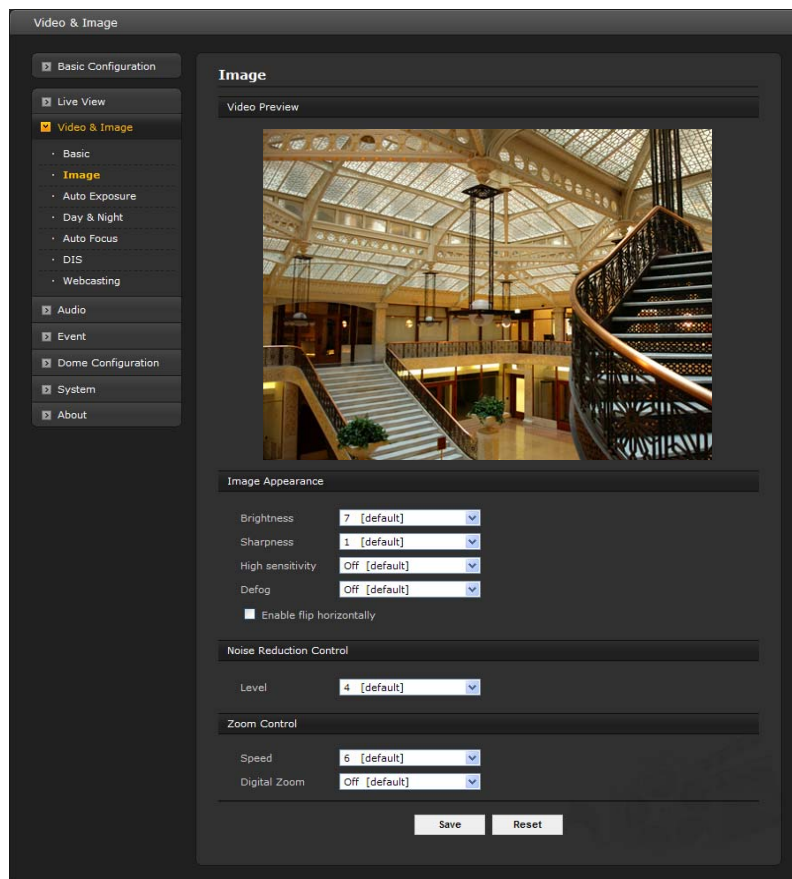

- **Image Appearance:**

- **Brightness:** The image brightness can be adjusted in the range 1 ~ 12, where a higher value produces a brighter image.
- **Sharpness:** Controls the amount of sharpening applied to the image. A sharper image might increase image noise especially in low light conditions. A lower setting reduces image noise, but the image would be less sharp.
- **High sensitivity:** Produce brighter image in low light environment. Select On or Off.
- **Defog:** Produce clearer image in hazy environment. Select On or Off.
- **Enable flip horizontally:** Flip the camera image upside down. Check box to enable.

- **Noise Reduction Control:** The NR (Noise Reduction) function removes noise to provide clearer image. In bright conditions, changing the NR level may not affect the image quality.


- **Level:** The level can be adjusted in the range 1 ~ 10 and Off.

- **Zoom Control:**

- **Speed:** The speed can be adjusted in the range 1 ~ 8.
- **Digital Zoom:** Zoom in and out on the video image. Select On or Off.

When satisfied with the settings, click the **Save** button, or click the **Reset** button to revert to previously saved settings.

3) Auto Exposure

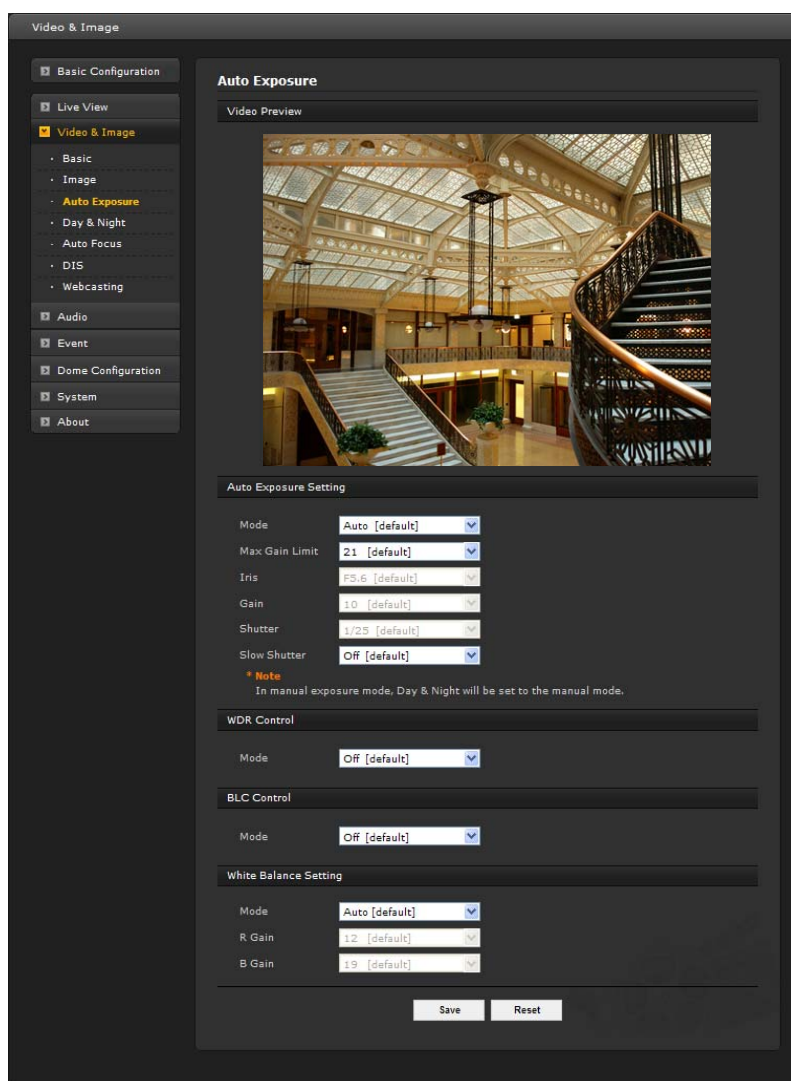


- **Auto Exposure Setting:** Exposure is the amount of light detected by the camera sensor. A scene with correct exposure settings has adequate detail and contrast between white and dark values. An image with too little or too much exposure may lose detail in the scene. The camera features Auto and Manual Exposure Settings.
 - **Mode:** Supports exposure modes to control the amount of light detected by the camera sensor based on settings for light conditions.
 - **Max Gain Limit:** Controls the upper limit of the gain that the camera can control. This is only available if Exposure mode is set to Auto.
 - **Iris:** Controls the camera iris. This is only available if Exposure mode is set to Manual.
 - **Gain:** Increasing exposure gain increases the brightness of image, but it also increases the amount of noise in the image. This is only available if Exposure mode is set to Manual.
 - **Shutter:** Controls the electronic shutter speed. This is only available if Exposure mode is set to Manual.
 - **Slow Shutter:** The camera can lower the shutter speed electronically to get a brighter image when the brightness drops. This is only available if Exposure mode is set to Auto.

- **WDR Control:** Wide Dynamic Range (WDR) improves video exposure quality in scenes with high contrast between bright and dark areas, for example, if a shady area and a bright light area are in the same scene.
 - **Mode:** Select On or Off.
- **BLC Control:** Backlight Compensation (BLC) corrects the exposure of the subjects that are in a bright light source.
 - **Mode:** Select On or Off.
- **White Balance Setting:** Adjusts the color hue (red and blue) gains for a camera so that true white appears white in the image. It is normally compensated for by the automatic gain control. In some lighting conditions, you may need to manually adjust the red and blue settings for optimal viewing. When Automatic White Balance is enabled, the camera measures the image and automatically adjusts the red and blue settings to balance white. When Automatic White Balance is disabled, the camera uses the values set for the red and blue settings to balance white.
 - **Mode:**
 - * **Auto:** Computes the white balance value output using color information from the entire screen automatically.
 - * **Manual:** R (red) and B (blue) Gain can be changed manually.
 - **R Gain:** The R gain can be adjusted in the range 0 ~ 255. This is only available if exposure mode is set to Manual.
 - **B Gain:** The B gain can be adjusted in the range 0 ~ 255. This is only available if exposure mode is set to Manual.

When satisfied with the settings, click the **Save** button, or click the **Reset** button to revert to previously saved settings.

4) Day & Night

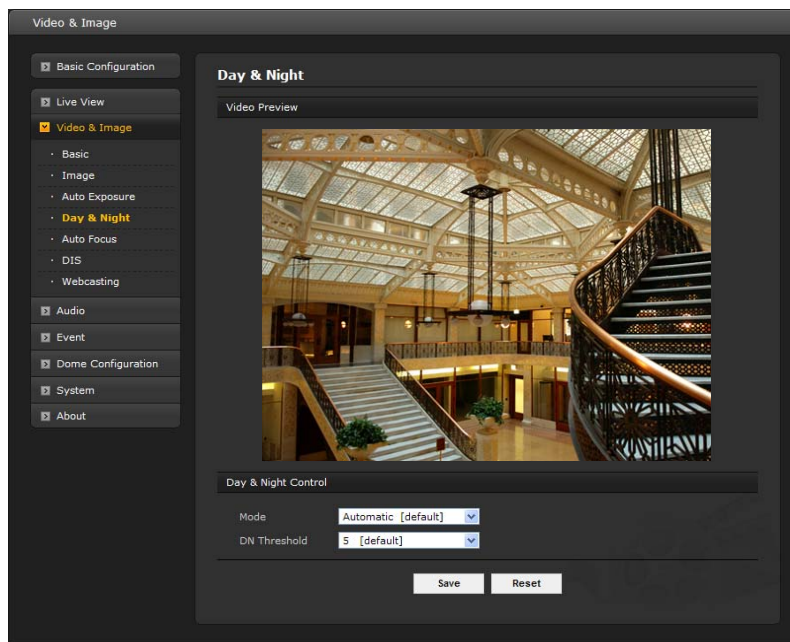

- **Day & Night Control:** Select the day & night mode from among three modes.


- **Mode:**

- * **Automatic:** Normally displays color image and switches automatically to black & white image after the ambient light level reaches a pre-defined threshold.
- * **Day:** Always displays color image.
- * **Night:** Always displays black & white image.

- **DN Threshold:** Adjusts the level of light at which the camera automatically switches between color and black & white image. (0 ~ 10)

When satisfied with the settings, click the **Save** button, or click the **Reset** button to revert to previously saved settings.

5) Auto Focus

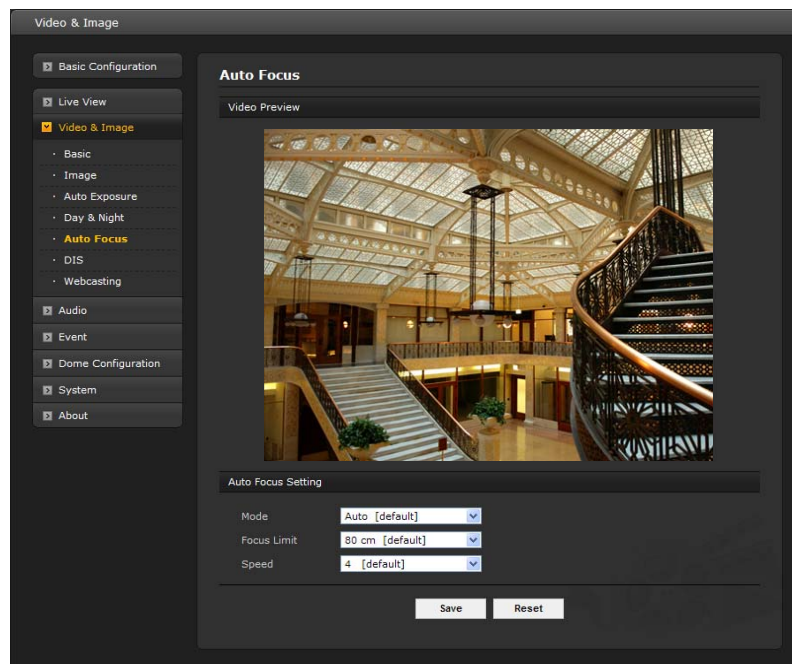

- **Auto Focus Setting:** Continuously adjusts the lens automatically to the correct focus for the sharpest picture.

- **Mode:**

- * **Auto:** Auto Focus is always active.

- * **Manual:** Auto Focus is inactive.


- **Focus limit:** The auto focus operates from this approximate distance value.

- **Speed:** The speed can be adjusted in the range 1 ~ 8.

NOTE: Avoid continuous, 24-hour use of the auto focus. This will shorten the lifespan of the lens.

When satisfied with the settings, click the **Save** button, or click the **Reset** button to revert to previously saved settings.

6) DIS

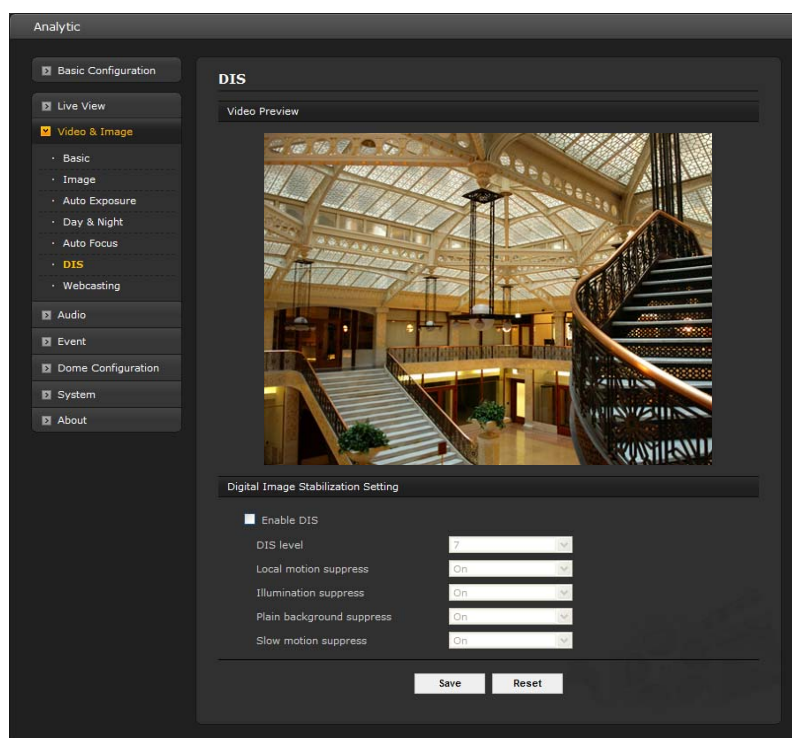


- **Digital Image Stabilization Setting:** Check the box to Enable DIS. Select a DIS level from 0 to 9; the larger the number, the more sensitive to motion. There are 4 types of motion that can be suppressed: Local motion, Illumination, Plain background, and Slow motion; each of these can be turned On or Off individually.

When satisfied with the settings, click the **Save** button, or click the **Reset** button to revert to previously saved settings.


7) Webcasting

The network camera can stream live video to a website. Copy the HTML code generated on the screen and paste it in page code of the website you want to display live video.

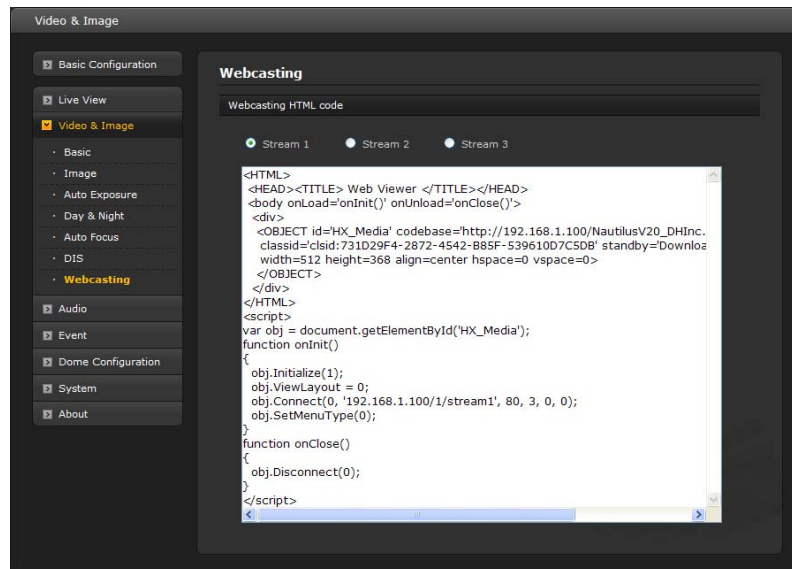

NOTE: To use webcasting service, the Enable Anonymous viewer login option must be checked. Refer to “3.5.1 Basic Configuration > Users” for more details.

3.5.4 Audio

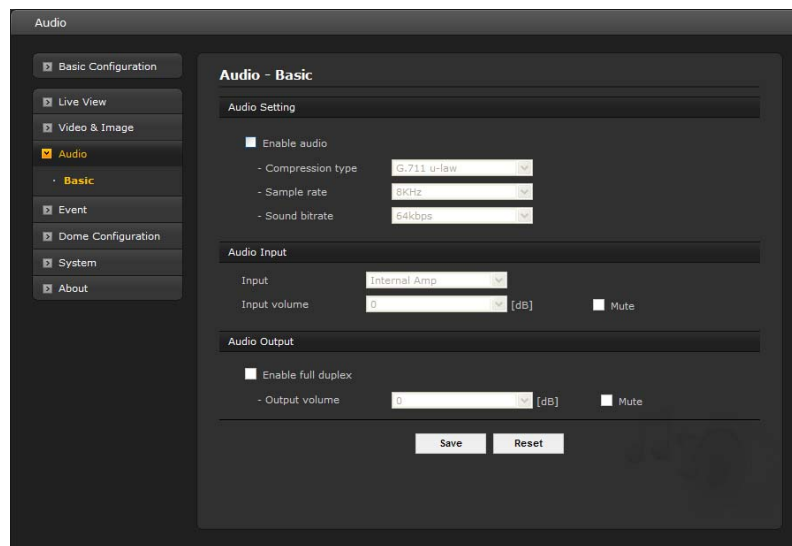


Refer to “3.5.1 Basic Configuration > Audio” for more details.

3.5.5 Event

1) Event In

▼ On Boot

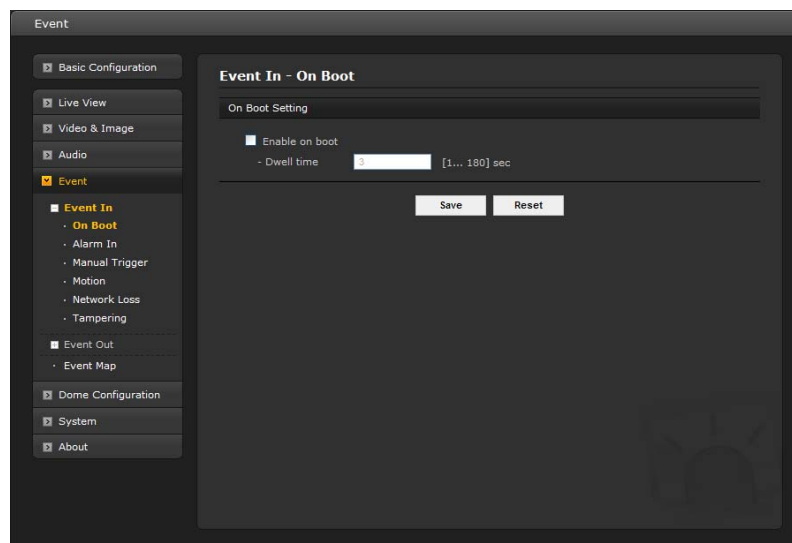


This is used to trigger the event every time the network camera is started. Select “Enable on boot” to activate the motion event.

Enter the Dwell time the event lasts from the point of detection, 1-180 seconds.

When satisfied with the settings, click the **Save** button, or click the **Reset** button to revert to previously saved settings.

▼ Alarm In

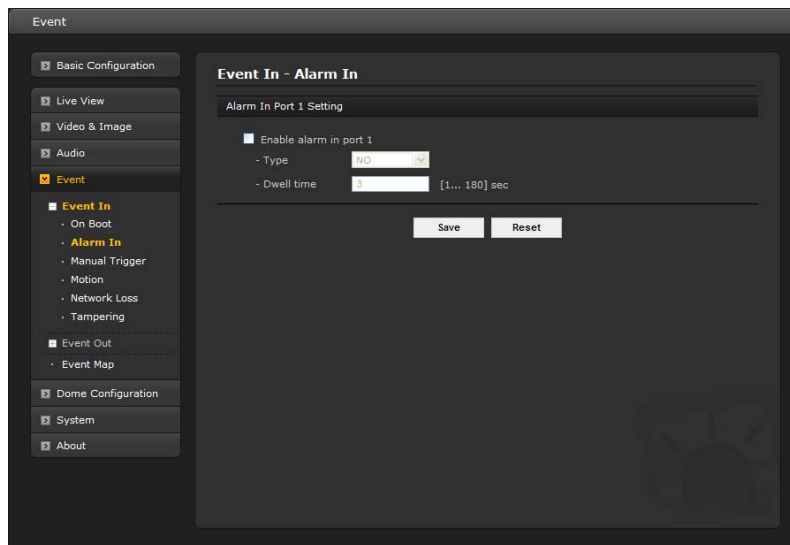

This page allows you to configure the alarm input supported by the camera. The Port can be given as Normally Open or Normally Close state, and the Normal state can be configured.

An input will be inactive as long as its Normal state is the same as its Current state. The 2 options for Normal state are NO (Normally Open) and NC (Normally Close). The input is activated when the Current state changes so that it no longer is the same as the Normal state.

• Alarm In Port 1 Setting:

Click the Enable alarm in port 1 checkbox to enable the Alarm In port 1.

- **Type:** The default setting is NO.

* **NO:** Normally Open

As an example, if the Normal state for a push button connected to an input is Open circuit; as long as the button is not pushed (and the Current state remains as Open circuit), the state will be inactive.

* **NC:** Normally Close

When the button is pushed, the circuit is grounded, the input's state changes to Grounded circuit and the input will no longer be in its normal state - it will have become active.

An input on the camera has an Open circuit when disconnected or when there is a voltage.

- **Dwell time:** Select the dwell time in seconds (1-180). The default setting is 60 seconds. Dwell time is how long an event lasts from the point of detection of an alarm input.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

▼ Manual Trigger

Event

Basic Configuration

Live View

Video & Image

Audio

Event

- Event In
 - On Boot
 - Alarm In
 - Manual Trigger
 - Motion
 - Network Loss
 - Tampering
- Event Out
- Event Map

Dome Configuration

System

About

Event In - Manual Trigger

Manual Trigger 1 Setting

☐ Enable manual trigger 1

- Dwell time: [1... 180] sec

Manual Trigger 2 Setting

☐ Enable manual trigger 2

- Dwell time: [1... 180] sec

Manual Trigger 3 Setting

☐ Enable manual trigger 3

- Dwell time: [1... 180] sec

Manual Trigger 4 Setting

☐ Enable manual trigger 4

- Dwell time: [1... 180] sec

Save Reset

This option makes use of the **Manual Trigger** button provided on the Live View page, which is used to start or stop the event type manually. Alternatively, the event can be triggered via the product's API (Application Programming Interface).

Check the Enable manual trigger box to activate the manual trigger (up to 4 manual triggers). Set the dwell time the trigger lasts (1-180 seconds).

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

▼ Motion

Event

Basic Configuration

Live View

Video & Image

Audio

Event

- Event In
 - On Boot
 - Alarm In
 - Manual Trigger
 - Motion
 - Network Loss
 - Tampering
- Event Out
- Event Map

Dome Configuration

System

About

Event In - Motion

Video Preview

Video Motion Detection Setting

☐ Enable video motion detection

- Sensitivity: [1... 100]

ID	Name	Type	Threshold	Dwell	Delete
1	Motion 1	Include	2	3	X
2	Motion 2	Include	2	3	X


Save Reset

Motion detection is used to generate an alarm whenever movement occurs (or stops) in the video image. A total of 8 Motion and/or Mask windows can be created and configured.

Motion is detected in defined **Motion** windows, which are placed in the video image to target specific areas. Movement in the areas outside the motion windows will be ignored. If part of a motion window needs to be masked, this can be configured in a **Mask** window.

- **Pre-Viewer:** Motion detection windows are configured by Motion or Mask windows. Each window can be selected by clicking with the mouse. It is also possible to **resize**, **delete** or **move** the window, by selecting the appropriate window at the mouse menu on the video screen.

Select Enable video motion detection to activate the motion window.

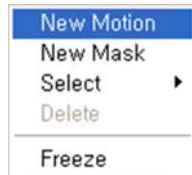

To create a motion or mask window, follow these steps:

1. Click the right button of mouse to display the mouse menu.
2. Select New Motion (or New Mask) from the mouse menu.
3. Click and drag mouse to designate a motion area.

- **Motion Detection Setting:** The behavior for each window is defined by adjusting the Threshold and Sensitivity, as described below. The combination of these parameters defines whether motion has occurred.


A motion index is a set of parameters describing Window Name, Type, Threshold and Dwell Time. Window Types is one of Motion and Mask windows.

- **Threshold:** Sets up the threshold for the motion detection. Threshold judges the amount of change in the area. A lower number increases the frequency of alarms.
- **Dwell Time:** Sets the hold time an event lasts from the point of detection of a motion (hold time).

You can also modify or delete a motion index. It is deleted by selecting an index in the table and then clicking **Delete**; select a motion area and change parameters to modify it.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.


▼ Network Loss

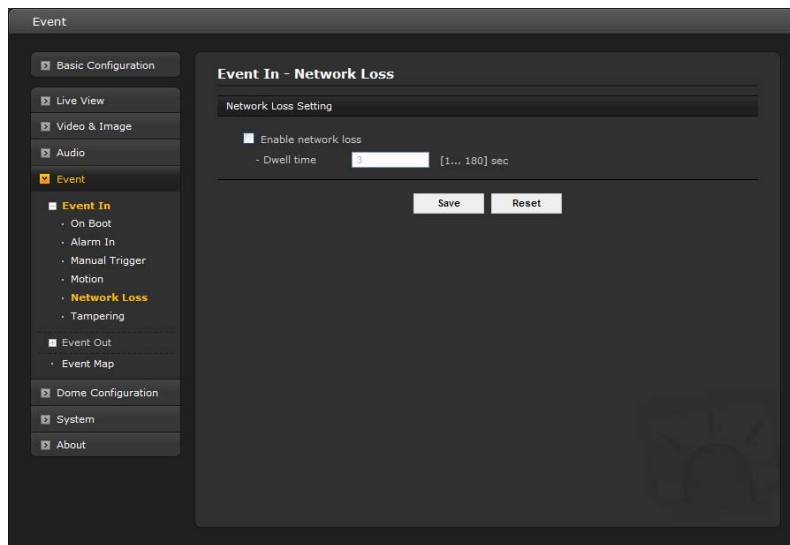

This is used to trigger the event every time the network connection fails. Select “Enable network loss” to activate the Network Loss event. Enter a dwell time, 1-180 second, for how long the event will last from the point of detection.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

▼ Tampering

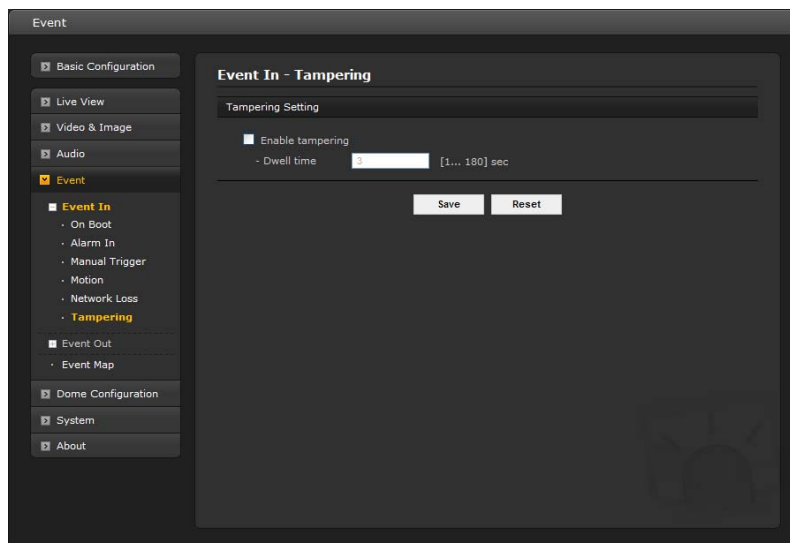

This is used to trigger the event when camera tampering occurs. Select “Enable tampering” to activate the Tampering event. Enter a dwell time from 1-180 seconds for how long this event will last.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

2) Event Out

▼ SMTP (E-Mail)

The screenshot shows the 'Event Out - SMTP(E-Mail)' configuration page. The left sidebar has 'Event' selected, with 'SMTP(E-Mail)' highlighted under 'Event Out'. The main panel has three sections: 'SMTP(E-Mail) Setting' with fields for Sender, Interval (60), Aggregate events (50), Mail server, Port (25), Connections security (None), Enable use(SMTP) authentication, User name, Password, and Login method (AUTH LOGIN); 'SMTP(E-Mail) Receiver' with eight input fields for Receiver 1 through Receiver 8; and 'SMTP(E-Mail) Test' with a Receiver input field and a Test button. Save and Reset buttons are at the bottom.

The network camera can be configured to send event and error email messages via SMTP (Simple Mail Transfer Protocol).

- **SMTP (E-Mail) Setting:** Select “Enable SMTP” to activate the SMTP operation.

- **Sender:** Enter the email address to be used as the sender for all messages sent by the network camera.

- **Interval:** Represents the frequency of the email notification when an event occurs.

- **Aggregate events:** Shows the maximum number of emails sent within each interval.

Check the box to “Use mail server” if required.

- **Mail Server/Port:** Enter the host names (or IP addresses) and port numbers for your mail server in the fields provided to enable the sending of notifications and image email messages from the network camera to predefined addresses via SMTP.

If your mail server requires authentication, check the box for “Enable use (SMTP) authentication” to log in to this server and enter the necessary information.

- **User name/Password:** Enter the User name and Password as provided by your network administrator or ISP (Internet Service Provider).

To ensure that the login procedure is performed as securely as possible when using SMTP authentication, you must define the weakest authentication method allowed.

- **Login method:** Set the weakest method allowed to the highest/safest method supported by the mail server. The most secure method is listed in the drop-down list:

- * **AUTH LOGIN/AUTH PLAIN**

- **SMTP (E-Mail) Receiver:**

- **Receiver:** Enter an email address for a receiver. You can also register the e-mail address of up to 8 recipients.

- **SMTP (E-Mail) Test:**

- **Receiver:** Enter an email address and click the **Test** button to test that the mail servers are functioning and that the email address is valid.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

▼ FTP & JPEG

When the network camera detects an event, it can record and save images to an FTP server. Images can be sent as e-mail attachments. Check the “Enable FTP” box to enable the service.

- **FTP Setting:**

- **Server:** Enter the server's IP address or host name.

NOTE: A DNS server must be specified in the TCP/IP network settings if using a host name.

- **Port:** Enter the port number used by the FTP server. The default is 21.

- **Use passive mode:** Under normal circumstances the network camera simply requests the target FTP server to open the data connection. Checking this box issues a PASV command to the FTP server and establishes a passive FTP connection, whereby the network camera actively initiates both the FTP control and data connections to the target server. This is normally desirable if there is a firewall between the camera and the target FTP server.

- **Remote directory:** Specify the path to the directory where the uploaded images will be stored. If this directory does not already exist on the FTP server, there will be an error message when uploading.

- **User name/Password:** Provide your log-in information.

- **JPEG Setting:**

- **Pre-event:** A pre-event buffer contains images from the time immediately preceding the event trigger. These are stored internally in the server. This buffer can be very useful when checking to see what happened to cause the event trigger.

Check the box to enable the pre-trigger buffer, enter the desired total length in seconds, minutes or hours, and specify the required image frequency.

- **Post-event:** This function is the counterpart to the pre-trigger buffer described above and contains images from the time immediately after the trigger. Configure as for pre-event.
- **Prefix file name:** This name will be used for all the image files saved. If suffixes are also used, the file name will take the form <prefix>, <suffix>, <extension>.
- **Additional suffix:** Add either a date/time suffix or a sequence number - with or without a maximum value.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

▼ HTTP Server

When the network camera detects an event, the HTTP Server is used to receive uploaded image files and/or notification messages. Check the “Enable HTTP server” box to enable the service.

• HTTP Server Setting:

- **Name:** The name of the HTTP event server. Use a descriptive name.
- **URL:** The network address to the server and the script that will handle the request.


For example: <http://192.168.12.244/cgi-bin/upload.cgi>

- **User name/Password:** Provide your log-in information.

- **HTTP Server Test:** When the setup is complete, the connection can be tested by clicking the **Test** button.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

▼ Alarm Out

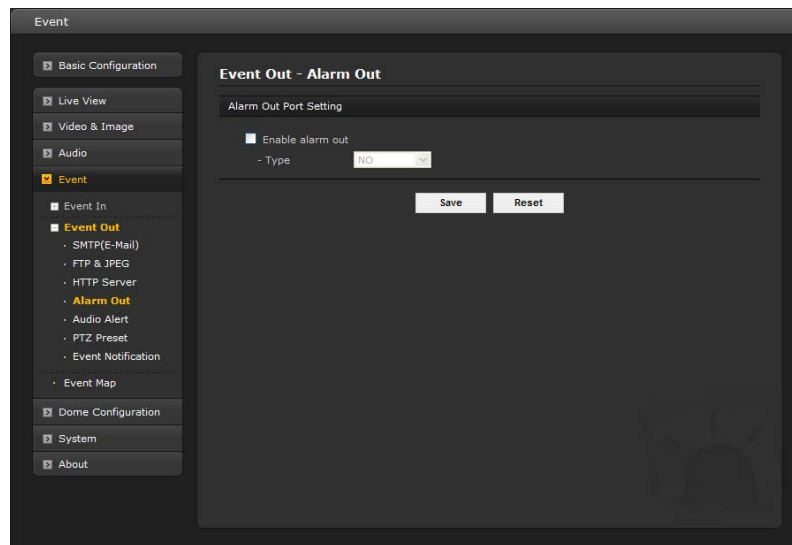

When the network camera detects an event, it can control external equipment to its alarm output port.

- **Enable alarm out:** Click the “Enable alarm out” checkbox to enable the Alarm Out port.
 - **Type:** Select a Type. The default setting is NO.
 - * **NO:** Normally Open
 - * **NC:** Normally Close

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

▼ Audio Alert

The screenshot shows a web interface for configuring an audio alert. On the left is a sidebar menu with categories like 'Basic Configuration', 'Live View', 'Video & Image', 'Audio', 'Event', 'Dome Configuration', 'System', and 'About'. The 'Event' category is expanded, showing sub-items like 'Event In', 'Event Out', 'SMTP(E-Mail)', 'FTP & JPEG', 'HTTP Server', 'Alarm Out', 'Audio Alert' (which is highlighted), 'PTZ Preset', 'Event Notification', and 'Event Map'. The main content area is titled 'Event Out - Audio Alert'. It contains two main sections: 'Audio Alert Setting' and 'Audio Alert Test'. The 'Audio Alert Setting' section has a checkbox labeled 'Enable audio alert'. Below it are three rows for 'Audio file 1', 'Audio file 2', and 'Audio file 3'. Each row has a text input field, a 'Browse...' button, and an 'Upload' button. The 'Audio Alert Test' section features a table with columns: 'No.', 'File Name', 'File Size', 'Play Time', and 'Bitrate'. Below the table is a note: '* Note: Total file size must be less than 512KB.' and two buttons, 'Test' and 'Remove'. At the bottom of the main area are 'Save' and 'Reset' buttons.

When the network camera detects an event, it can output predefined audio data to an external speaker. Check the “Enable audio alert” box to enable the service.


- **Audio Alert Setting:** To use the Audio Alert with the network camera, an audio data file made by the user must be uploaded from your PC. Provide the path to the file directly, or use the **Browse** button to locate it. Then click the **Upload** button. Up to 3 audio files are available. The total file size must be less than 512 KB.
- **Audio Alert Test:** When the setup is complete, the audio output can be tested by clicking the **Test** button.

To remove an audio file, select index and click the **Remove** button.

NOTE: For the proper operation of Audio Alert, “full duplex” must be enabled on the Audio setting page.


Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

▼ PTZ Preset

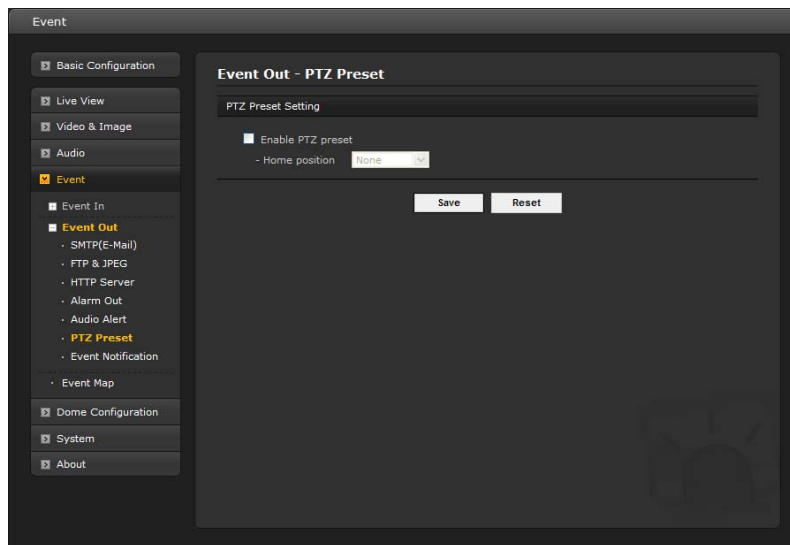

When the camera detects an event, you can move the camera to a predefined preset position. Check the “Enable PTZ preset” box to enable the service and return to the Home position once the event has ended. Define the Home position in the field provided.

▼ Event Notification

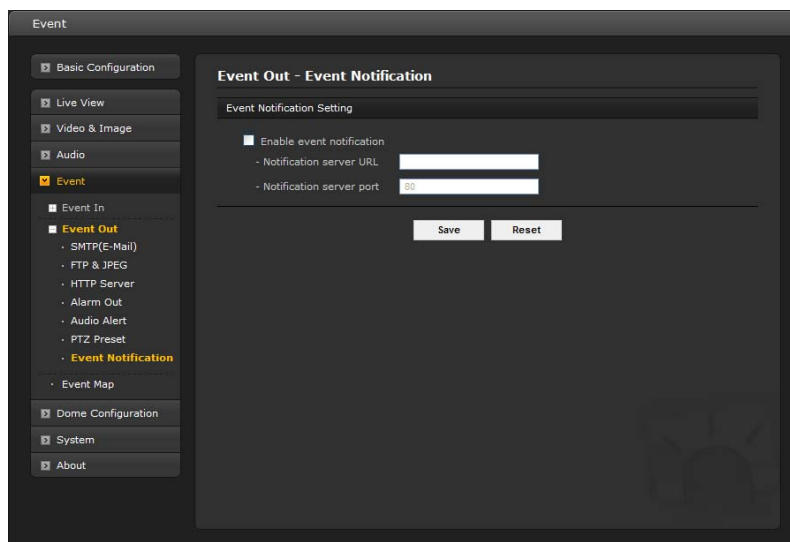


When the network camera detects an event, it can send a message to a server to receive notification that this event has occurred. Check the “enable event notification” box to enable the service.

- **Event Notification Setting:**

- **Notification Server URL/port:** Enter the network server URL and the port that will handle the request.

3) Event Map

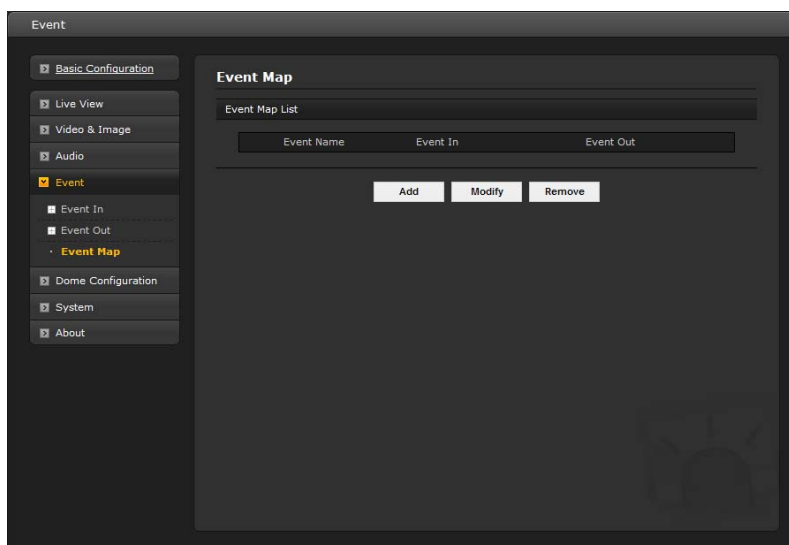

The event map allows you to change the settings and establish a schedule for each event trigger from the network camera; up to max. 15 events can be registered.

Click the **Add** button to make a new event map: a popup window displays as below. To change an existing event, select that event and click the **Modify** button; this same window will display and the information can be changed as required. Selecting an event and clicking Remove deletes the event.

The 'Add Event Map' popup window is divided into several sections. The 'General' section has a 'Name' field with 'New Event' entered. The 'Event In' section has a 'Type' dropdown menu set to 'Onboard'. The 'Event Out' section includes a checkbox for 'E-Mail' with eight corresponding email address fields (1-8), a 'Subject' field, and an 'Additional info' field. Below this is a checkbox for 'FTP'. The 'HTTP server' section has a 'Message' field. The 'Alarm out' section has a checkbox for 'Audio alert' with three radio button options: 'Audio file 1', 'Audio file 2', and 'Audio file 3'. The 'Event Notification' section has a 'PTZ preset' dropdown set to 'preset1' and a checkbox for 'Return to home position after event'. At the bottom are 'OK' and 'Cancel' buttons.

- **General:** Enter the name for a new event map.
- **Event In:** Select an event type in the drop-down list.
- **Event Out:** Select a checkbox for those you want to use.
 - **E-mail:** Select the email addresses you want to notify via email that an event has occurred.
 - **FTP:** Record and save images to an FTP server when an event has occurred.


- **HTTP Server:** Send notification messages to an HTTP server that listens for these. The destination server must first be configured on the Event In page. Enter a message you want to send.
- **Alarm out:** Check box to enable the alarm out.
- **Audio Alert:** Select an Audio Alert file as the output when audio alert event triggered. The Audio Alert file must first be configured on the Event In page.
- **Event Notification:** It sends XML messages to a Notification server that listens for these. The destination server must first be configured on the Event In page.

3.5.6 Dome Configuration

1) Preset

If specific places are viewed routinely, you should program Presets. A Preset is a programmed video scene with automatic pan, tilt, zoom and focus settings.

Once programmed, clicking the Preset number or clicking the Go button in the PTZ Control Panel calls up that Preset automatically.

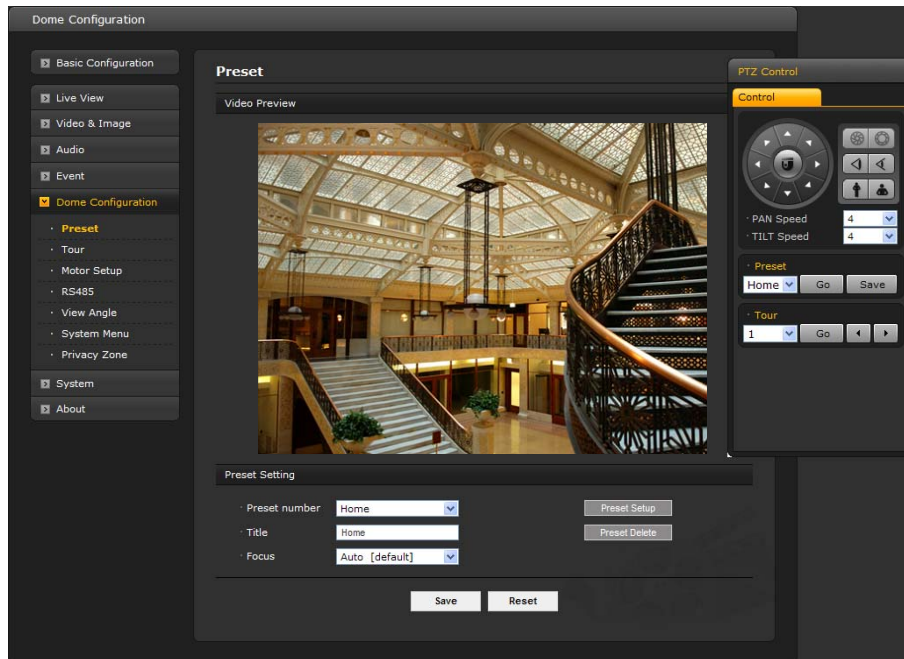

- **Preset Setting:**


- **Preset number:** The Preset number can be selected in the range 1 – 240 or Home.
- **Title:** Up to 12 characters (alphanumeric characters and space).
- **Focus:**
 - * **Auto:** Auto Focus is always active default).
 - * **Manual:** Auto Focus is inactive.
- **Preset Setup:** Activate the PTZ Control Panel.
- **Preset Delete:** Delete selected Preset number.

Follow steps below to store the Preset positions:

1. Click the **Preset Setup** button; the PTZ Control Panel displays.
2. Choose the desired Preset number from the Preset drop-down list:
3. Aim the camera to the desired location and make lens adjustments (view direction and lens control) by using the **Arrow** and **Zoom** button in PTZ Control Panel; click the **Save** button.
4. Repeat step 2 through 3 for each additional Preset position.


2) Tour

There are 8 programmable Tours. Each Tour consists of up to 100 Presets.

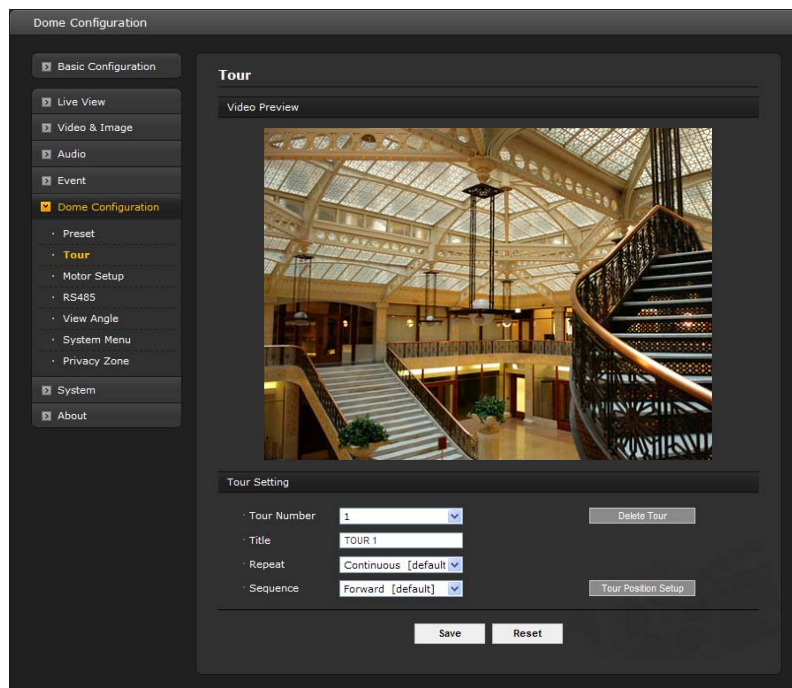

• Tour Setting:

- **Tour Number:** The Tour number can be selected in the range 1 - 8.
- **Title:** Up to 12 characters (alphanumeric characters and space).
- **Repeat:** Select number of repetition from Continuous to 90. The default is Continuous.
- **Sequence:** Select either forward or backward sequence in the Tour position list.
- **Delete Tour:** Delete the stored tour number from the Tour Position Setup list.
- **Tour Position Setup:** Open or close the Tour Position Setup as below.

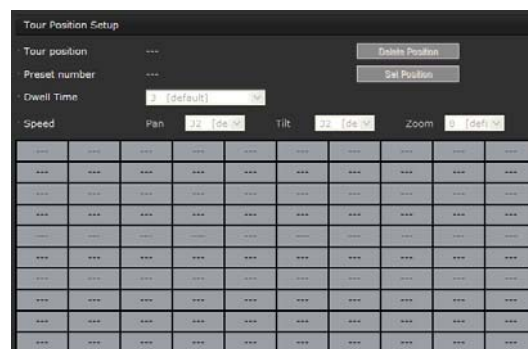

• Tour Position Setup:

- **Tour position:** The Tour position can be selected in the range 1 ~ 100.
- **Preset number:** Show the selected Preset number.
- **Dwell Time:** Select the Dwell Time from 0 to 99 seconds. The default is 3 seconds.
- **Speed:** Adjust Pan/Tilt/Zoom Speed to a slower movement. The defaults are maximum speed.
- **Delete Position:** If you want to remove a Tour position from Tour Position Setup list, select the desired Tour Position, and click the **Delete Position** button.


- **Set Position:** Click the **Set Position** button, then show the stored Presets or Home on drop-down list.

Follow steps below to program the Tours:

1. Click the desired Tour position on Tour Position Setup list, and click **Set Position** button; show the saved Presets or Home on drop-down list. Click a Preset or Home.
2. Repeat step 1 for each desired position.
3. Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

3) Motor Setup

Motor Setup menu provides the pan and tilt speed settings of the camera.

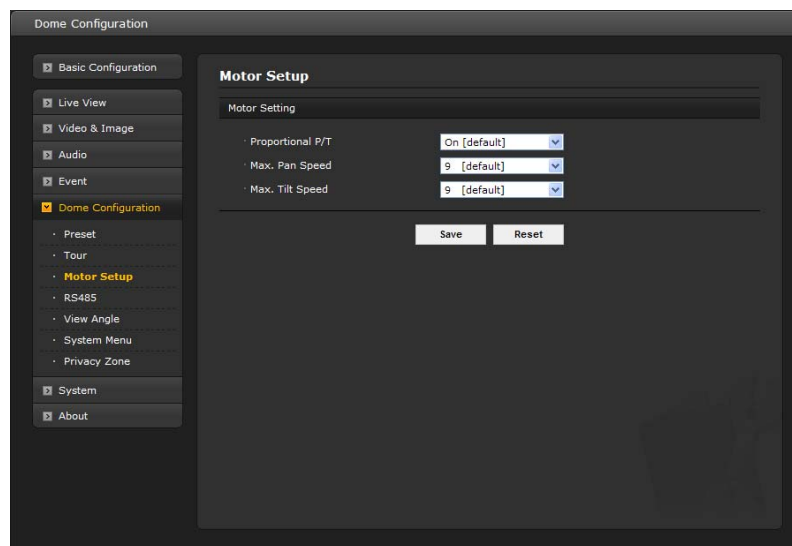

• Motor Setting:

- **Proportional P/T:** Select On or Off; On is default.
- **Max. Pan Speed:** The maximum pan speed can be adjusted in the range 1 ~ 38.
- **Max. Tilt Speed:** The maximum tilt speed can be adjusted in the range 1 ~ 30.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

4) RS485


The screenshot shows a web interface titled "Dome Configuration". On the left is a sidebar menu with the following items: Basic Configuration, Live View, Video & Image, Audio, Event, Dome Configuration (highlighted with a yellow background), Preset, Tour, Motor Setup, RS485 (highlighted with a yellow background), View Angle, System Menu, Privacy Zone, System, and About. The main content area is titled "RS485" and contains a section "RS485 setting" with the following fields: DOME ID (text input with value "1" and a range "[1... 3999]"), Protocol (dropdown menu with "Auto" selected), Baudrate (dropdown menu with "9600" selected), and Parity (dropdown menu with "None" selected). At the bottom of the settings section are two buttons: "Save" and "Reset".

• RS485 Setting:

- **DOME ID:** Enter identification number for external PTZ device. The DOME ID can be adjusted in the range 1 ~ 3999.
- **Protocol:** Select PTZ protocol to communicate with external PTZ device.
- **Baud rate:** Select one of the Baud rates.
- **Parity:** Select the Parity bit.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

5) View Angle

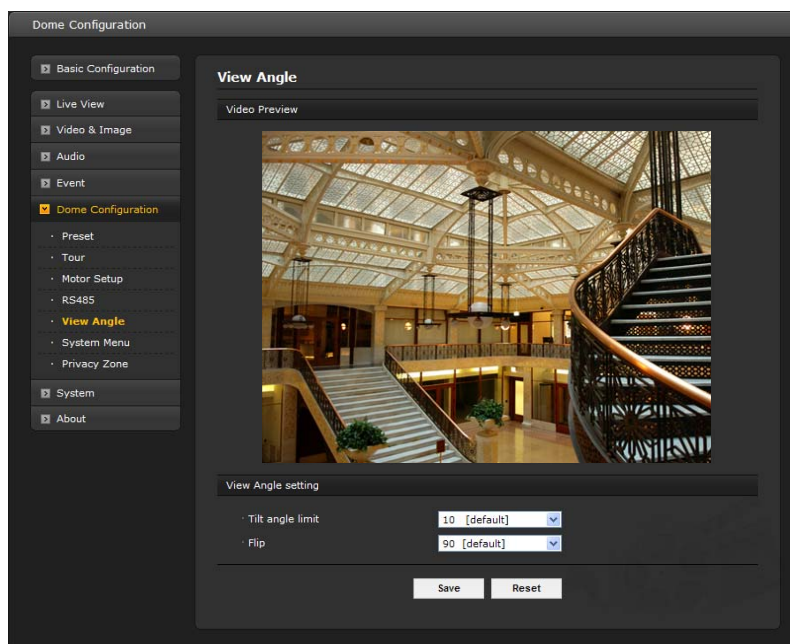

• View Angle Setting:

- **Tilt angle limit:** This option is designed to limit the view angle if there is some obstruction when zooming out on specific areas of the tilt angle.


NOTE: Focus issues may occur if the tilt angle limit is set below 10 degree.

- Flip:

- * **Off:** The dome camera moves up to 90° vertically.
- * **Auto:** When the camera reaches the floor directly above the moving object, it will stop. When this occurs, release the Joystick instantly and pull it down again to run the auto-flip function. When you use the panning range, it is recommended to set the flip mode to Auto.
- * **90, 100, 110, 120:** Allows the image to flip digitally when the camera moves over the setting angle vertically.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

6) System Menu

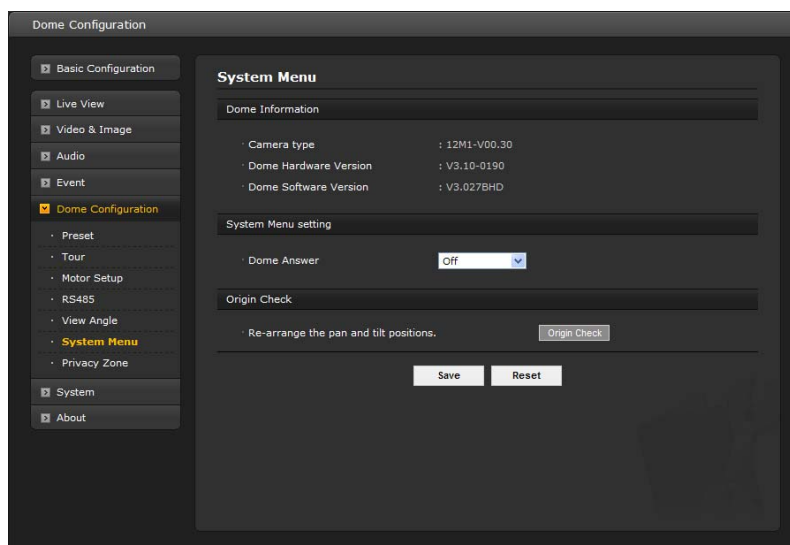


- **Dome Information:** The system information provides essential information about the dome if service is required. This information cannot be modified.
- **System Menu setting:**
 - **Dome Answer:** Select On or Off for acknowledge command from the dome. This option is helpful to escape the collision of the command using some DVRs.
- **Origin Check:** If you find the dome in the wrong position during operation, execute this by clicking the **Origin Check** button; the dome camera will return to the right position after the origin check operation.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

7) Privacy Zone

Using privacy zones (masks), you can hide up to 8 unwanted scenes in a camera. The color of privacy zones is gray.

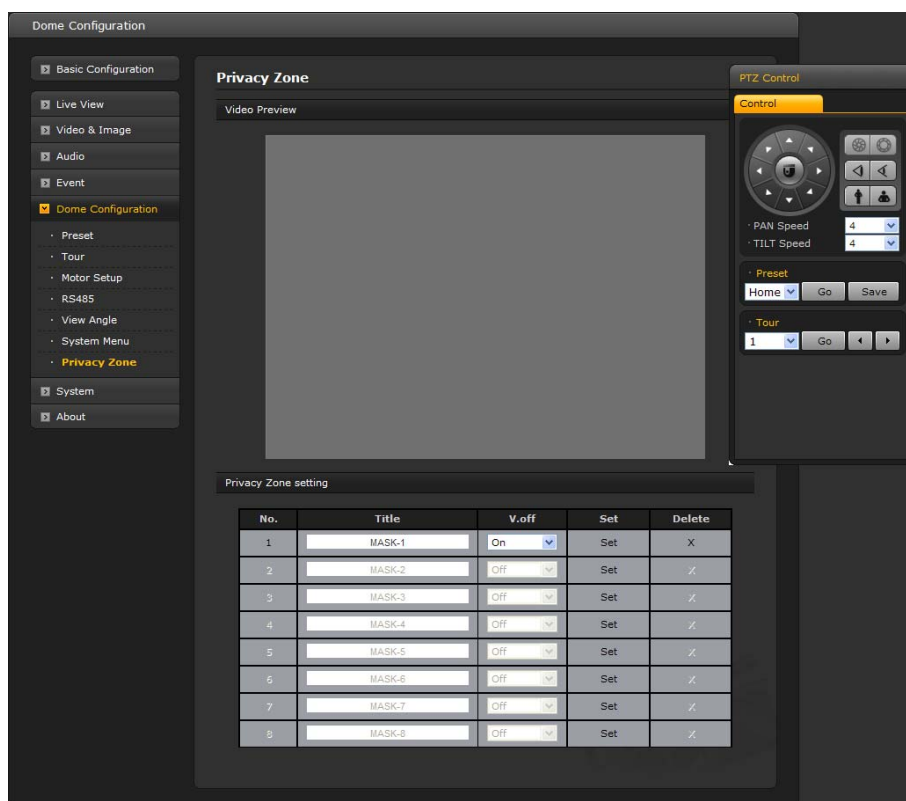


- **Privacy Zone Setting:** Follow the steps below to configure the privacy zones;
 1. After aiming the camera (view direction and lens control) using the **Arrow** and **Zoom** button in PTZ Control Panel, click a Set in the Set column of any inactive row to create privacy zone.
 2. You can change the Title up to 12 alphanumeric characters.
 3. In order to hide or display the privacy zone, choose On or Off in V.off column.
 4. Click X at Delete column to delete privacy zone.

3.5.7 System

1) Information

System information can be entered on this page. This page is very useful when you require device information after installation.

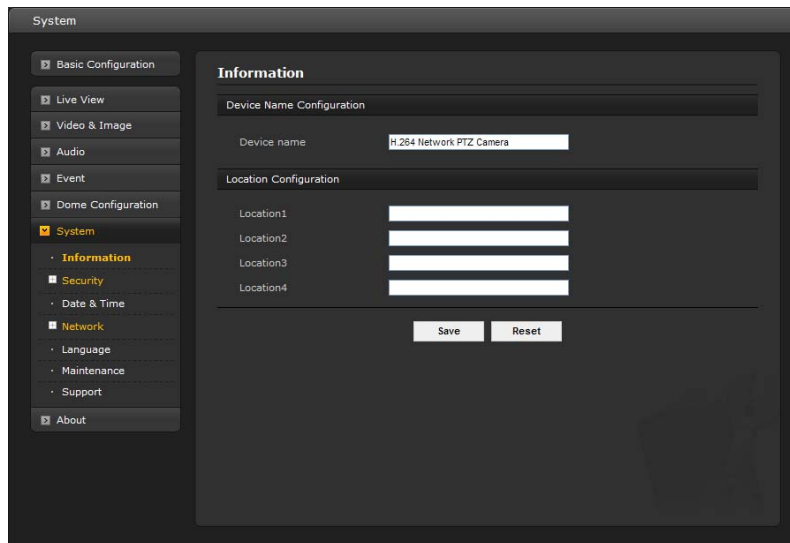


The screenshot shows a web interface for system configuration. On the left is a sidebar menu with options: Basic Configuration, Live View, Video & Image, Audio, Event, Dome Configuration, System (highlighted), Information (highlighted), Security, Date & Time, Network, Language, Maintenance, Support, and About. The main area is titled 'System' and contains an 'Information' section. This section has two sub-sections: 'Device Name Configuration' with a text input field containing 'H.264 Network PTZ Camera', and 'Location Configuration' with four text input fields labeled Location1, Location2, Location3, and Location4. At the bottom of the main area are 'Save' and 'Reset' buttons.

- **Device Name Configuration:** Enter the device name.
- **Location Configuration:** Enter the location information. You can enter up to four locations.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

2) Security

▼ Users

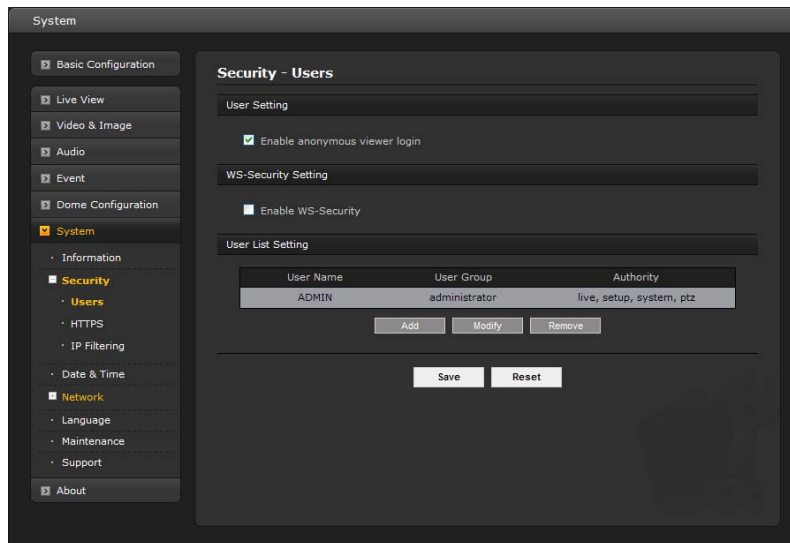

User access control is enabled by default when the administrator sets the root password on first access. New users are authorized with user names and passwords, or the administrator can choose to allow anonymous viewer login to the Live View page, as described below:


- **User Setting:** Check the box to “Enable anonymous viewer login” to the network camera without a user account. When using the user account, users have to log-in at every access.
- **WS-Security Setting:** Do not check this box to connect and monitor the network camera through Vicon’s viewing software using drivers older than 935.

NOTE: WS-Security is an open format for signing and encryption of message parts, for supplying credentials in the form of security tokens, and for security passing those tokens in a message.

- **User List Setting:** This section shows a list of registered user accounts. Press the **Add** button; the pop-up window displays as below. Enter a user name and password to be added and select the user group from the drop-down list; click OK to register the user or Cancel to negate the user. User information can also be modified by selecting the user from the list and clicking the Modify button; this same screen will display. Change any information as needed. Selecting a user and clicking Remove deletes the user.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

▼ HTTPS

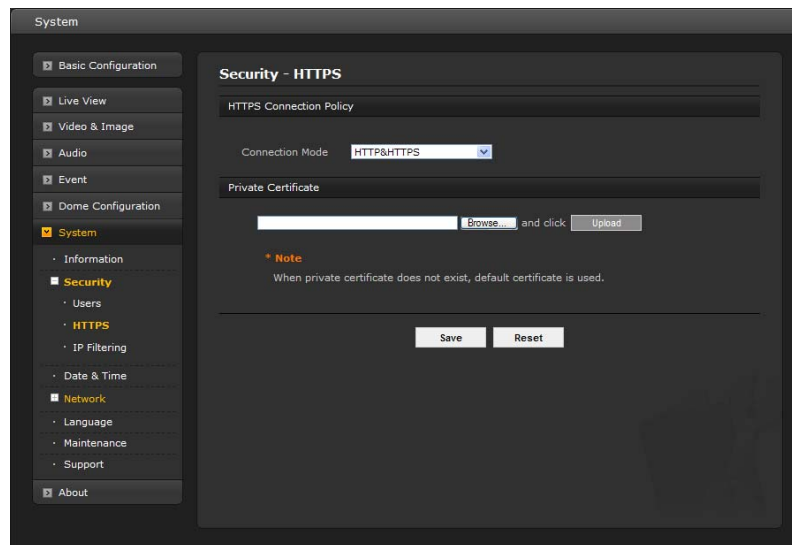

For greater security, the network camera can be configured to use HTTPS [Hypertext Transfer Protocol over SSL (Secure Socket Layer)], so that all communication that would otherwise go via HTTP will instead go via an encrypted HTTPS connection.

- **HTTPS Connection Policy:** Choose the form of connection you wish to use from the drop-down list for the administrator, Operator and Viewer to enable HTTPS connection (set to HTTP by default).

- HTTP

- HTTPS

- HTTP & HTTPS

- **Upload Certificate:** To use HTTPS for communication with the network camera, an official certificate issued by a CA (Certificate Authority) must be uploaded from your PC. Provide the path to the certificate directly, or use the **Browse** button to locate it. Then click the **Upload** button.

Refer to the home page of your preferred CA for information on where to send the request.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

▼ IP Filtering

The screenshot shows a web-based configuration interface for a system. On the left is a sidebar menu with categories: System, Security, and Network. The 'System' category is expanded, showing sub-items like Information, Security, Users, HTTPS, IP Filtering, Date & Time, Network, Language, Maintenance, Support, and About. The 'IP Filtering' item is selected. The main panel is titled 'Security - IP Filtering' and contains an 'IP Filtering Setting' section. It features a checkbox for 'Enable IP filtering' which is checked. Below this is a table with columns: On/Off, Priority, Policy, Start IP, and End IP. The table contains five rows, all with 'ALLOW' policy and '0.0.0.0' start and end IP addresses. At the bottom of the table are 'Save' and 'Reset' buttons.

On/Off	Priority	Policy	Start IP	End IP
<input checked="" type="checkbox"/>	1	ALLOW	0.0.0.0	0.0.0.0
<input type="checkbox"/>	2	ALLOW	0.0.0.0	0.0.0.0
<input type="checkbox"/>	3	ALLOW	0.0.0.0	0.0.0.0
<input type="checkbox"/>	4	ALLOW	0.0.0.0	0.0.0.0
<input type="checkbox"/>	5	ALLOW	0.0.0.0	0.0.0.0

Checking the “Enable IP address filtering” box enables the IP address filtering function. When the IP address filter is enabled, addresses added to the list are set as allowed or denied addresses. All other IP addresses not in this list will then be allowed or denied access accordingly, that is, if the addresses in the list are allowed, then all others are denied access, and vice versa.

NOTE: Users from IP addresses that will be allowed must also be registered with the appropriate access rights (Guest, Operator or Administrator). This is done from Setup > System > Security > Users.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

3) Date & Time

The screenshot shows a web interface for configuring the system's date and time. On the left is a sidebar menu with options: Basic Configuration, Live View, Video & Image, Audio, Event, Dome Configuration, System (highlighted), Information, Security, Date & Time (highlighted), Network, Language, Maintenance, Support, and About. The main content area is titled 'Date & Time' and contains several sections: 'Current Server Time' with date and time fields; 'New Server Time' with a time zone dropdown and a checkbox for daylight saving; 'Time mode' with three radio buttons for synchronization methods (computer time, NTP server, or manual); and 'Date & Time Format' with dropdowns for date and time formats. At the bottom are 'Save' and 'Reset' buttons.

- **Current Server Time:** This displays the current date and time (24h clock). The time can be displayed in 12h clock format (see below).
- **New Server Time:** Select your time zone from the drop-down list. If you want the server clock to automatically adjust for daylight saving time, select “Automatically adjusts for daylight saving time changes”.

From the Time mode section, select the preferred method to use for setting the time:

- **Synchronize with computer time:** Sets the time from the clock on your computer.
- **Synchronize with NTP server:** The network camera will obtain the time from an NTP server every 60 minutes.
- **Set manually:** This option allows you to manually set the time and date.

NOTE: If using a host name for the NTP server, a DNS server must be configured under TCP/IP settings.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

4) Network

The screenshot shows a web interface for network configuration. On the left is a sidebar menu with categories: Basic Configuration, Live View, Video & Image, Audio, Event, Dome Configuration, System (highlighted), Information, Security, Date & Time, Network (highlighted), DDNS, RTP, UPnP, QoS, NAT, Zeroconf, Bonjour, Language, Maintenance, Support, and About. The main content area is titled 'Network - Basic' and contains several sections: 'IP Address Configuration' with radio buttons for 'Obtain IP address via DHCP' (selected) and 'Use the following IP address'; 'IPv6 Address Configuration' with a checkbox for 'Enable IPv6'; 'DNS Configuration' with radio buttons for 'Obtain DNS server via DHCP' (selected) and 'Use the following DNS server address'; 'Host Name Configuration' with a text field for 'Host Name'; 'Services' with input fields for 'HTTP port', 'HTTPS port', and 'RTSP port'; and 'ARP/Ping setting' with a checkbox for 'Enable ARP/Ping setting'. At the bottom are 'Save' and 'Reset' buttons.

Settings regarding the network can be executed. Settings for IP, DNS, Host Name, Port, and ARP/Ping can be established, along with setting for DDNS, uPnP, QoS, Zeroconfig and Bonjour.

▼ Basic

• IP Address Configuration:

- **Obtain IP address via DHCP:** Dynamic Host Configuration Protocol (DHCP) is a protocol that lets network administrators centrally manage and automate the assignment of IP addresses on a network. DHCP is enabled by default. Although a DHCP server is mostly used to set an IP address dynamically, it is also possible to use it to set a static, known IP address for a particular MAC address.

- **Use the following IP address:** To use a static IP address for the network camera, check the radio button and then make the following settings:

- * **IP address:** Specify a unique IP address for your network camera.

- * **Subnet mask:** Specify the mask for the subnet the network camera is located on.

- * **Default router:** Specify the IP address of the default router (gateway) used for connecting devices attached to different networks and network segments.

- **IPv6 Address Configuration:** Check this box to enable IPv6. Other settings for IPv6 are configured in the network router.

- **DNS Configuration:** DNS (Domain Name Service) provides the translation of host names to IP addresses on your network.

- **Obtain DNS Server via DHCP:** Automatically use the DNS server settings provided by the DHCP server. Click the View button to see the current settings.
- **Use the following DNS server address** to enter the desired DNS server by specifying the following:
 - * **Domain name:** Enter the domain(s) to search for the host name used by the network camera. Multiple domains can be separated by semicolons (;). The host name is always the first part of a Fully Qualified Domain Name, for example, myserver is the host name in the Fully Qualified Domain Name myserver.mycompany.com where mycompany.com is the Domain name.
 - * **DNS servers:** Enter the IP addresses of the primary and secondary DNS servers.
- **Host Name Configuration:**
 - **Host Name:** Enter the host name to be used as device information in the client software or SmartManager.
- **Services:**
 - **HTTP port:**
Enter a port to receive a service through the HTTP. Default Port Number is '80'.
 - **HTTPS port:**
Enter a port to receive a service through the HTTPS. Default Port Number is '443'.
 - **RTSP port:**
Enter a port to receive a service through the RTSP. Default Port Number is '554'.
- **ARP/Ping Setting:**
 - **Enable ARP/Ping setting of IP address:** The IP address can be set using the ARP/Ping method, which associates the unit's MAC address with an IP address. Check this box to enable the service. Leave disabled to prevent unintentional resetting of the IP address.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

▼ DDNS

The screenshot shows a web interface for configuring DDNS. On the left is a sidebar menu with categories: System, Live View, Video & Image, Audio, Event, and Dome Configuration. Under 'System', there are sub-items: Information, Security, Date & Time, Network (highlighted), RTP, UPnP, QoS, NAT, Zeroconf, Bonjour, Language, Maintenance, Support, and About. The 'Network - DDNS' section is active. It contains a checkbox for 'Enable DDNS'. Below it is a note: 'Please remember you have to configure at least primary DNS server in DNS configuration settings to use Dynamic DNS.' There are input fields for 'DDNS Server' (containing 'cctv-network.co.kr'), 'Registered host', 'User name', 'Password', and 'Confirm password'. A dropdown menu for 'Maximum time interval' is set to '1 hour'. There is a checkbox for 'Register local network IP address' and a label 'Registered IP address :'. At the bottom are 'Save' and 'Reset' buttons.

- **Internet DDNS (Dynamic Domain Name Service):** When using the high-speed Internet with the telephone or cable network, users can operate the network camera even on the floating IP environment in which IPs are changed at every access.

NOTE: At least a primary DNS server must be configured in DNS configuration settings to use Dynamic DNS.

Users should receive an account and password by visiting a DDNS service like <http://www.dyndns.com/>.

- **Enable DDNS:** Check to have DDNS service available.

* **DDNS Server:** Select the DDNS server.

* **Registered host:** Enter an address of the DDNS server.

* **User name:** Enter an ID to access the DDNS server.

* **Password:** Enter a password to be used for accessing the DDNS server.

* **Confirm password:** Enter the password again to confirm it.

* **Maximum time interval:** Select a time interval to synchronize with the DDNS server from the drop-down list.

* **Register local network IP address:** Register a Network Video Server IP address to the DDNS server.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

▼ RTP

The screenshot shows a web interface for configuring RTP settings. On the left is a sidebar with a tree view containing: Basic Configuration, Live View, Video & Image, Audio, Event, Dome Configuration, System (selected), Information, Security, Date & Time, Network (expanded), Basic, DDNS, RTP (selected), UPnP, QoS, NAT, Zeroconf, Bonjour, Language, Maintenance, Support, and About. The main content area is titled 'Network - RTP'. It includes a 'Port Range' section with 'Start port' (30000) and 'End port' (30199). Below are three 'Multicast' sections (Stream 1, Stream 2, Stream 3). Each section has a checkbox for 'Enable multicast', a 'Multicast destination IP' field (221.1.128.25), an 'RTP port' field (40000), an 'RTP TTL' field (15), and an 'Enable always multicast' checkbox. At the bottom are 'Save' and 'Reset' buttons.

Users can configure settings for sending and receiving audio or video on a real-time basis. These settings are the IP address, port number, and Time-To-Live value to use for the media stream(s) in multicast H.264 format. Only certain IP addresses and port numbers should be used for multicast streams.

- **Port Range:**


- **Start port:** Enter a value between 30000 and 39920.
- **End port:** Enter a value between 30000 and 39920.

- **Multicast (Stream 1, 2, 3):** This function is for sending video to a Multicast group.

- **Enable Multicast:** Check the box to enable multicast operation.
- **Multicast destination IP:** Enter an IP between 224.0.0.0 and 239.255.255.255. Although it is empty, an IP will be entered automatically.
- **RTP port:** Enter a value between 1024 and 65530.
- **RTP TTL:** Enter a value between 1 and 255. If the network status is smooth, enter a lower value. However, if the network status is poor, enter a higher value. When there are many network cameras or users, a higher value may cause a heavy load to the network. For a detailed explanation, consult with a network manager.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

▼ UPnP

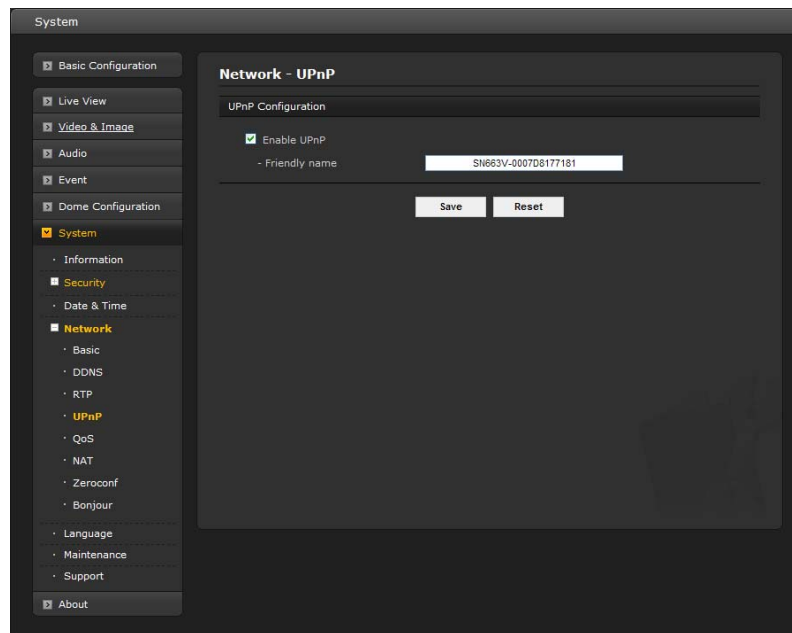

The network camera includes support for UPnP™. UPnP is enabled by default, and the network camera is then automatically detected by operating systems and clients that support this protocol. Enter a name in the Friendly name field.

NOTE: UPnP must be installed on your workstation if running Windows XP. To do this, open the Control Panel from the Start Menu and select Add/Remove Programs. Select Add/Remove Windows Components and open the Networking Services section. Click Details and then select UPnP as the service to add.


Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

▼ QoS

Quality of Service (QoS) provides the means to guarantee a certain level of a specified resource to selected traffic on a network. Quality can be defined as a maintained level of bandwidth, low latency, and no packet losses.

The main benefits of a QoS-aware network are:

- The ability to prioritize traffic and thus allow critical flows to be served before flows with lesser priority.
- Greater reliability in the network because of the control of the amount of bandwidth an application may use, so control over bandwidth races between applications.

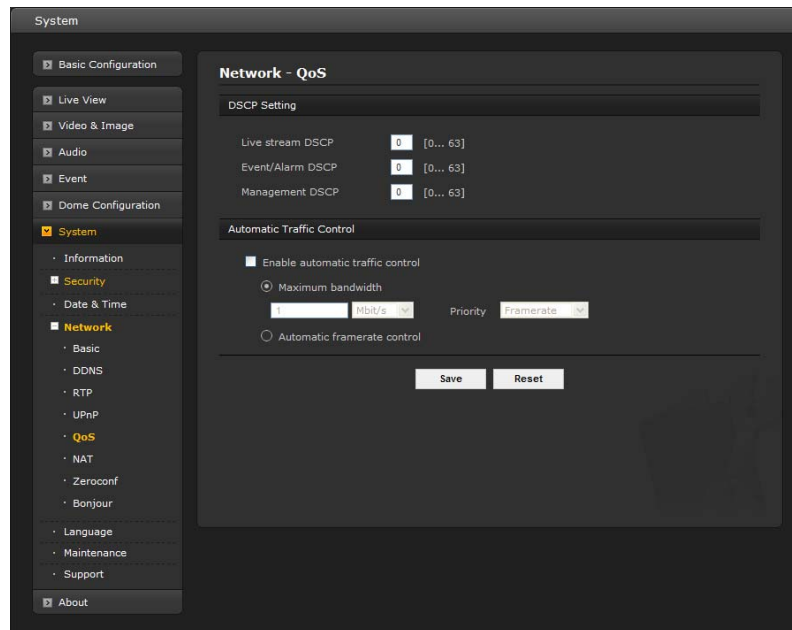

- **DSCP Settings:** For each type of network traffic supported by your network video product, enter a DSCP (Differentiated Services Code Point) value. This value is used to mark the traffic's IP header. When the marked traffic reaches a network router or switch, the DSCP value in the IP header tells the router or switch which type of treatment to apply to this type of traffic, for example, how much bandwidth to reserve for it.

NOTE: DSCP values can be entered in decimal or hex form, but saved values are always shown in decimal.

The following types of traffic are marked:


- **Live Stream DSCP**
- **Event/Alarm DSCP**
- **Management DSCP**
- **Automatic Traffic Control:** Set a limitation on user network resources by designating the maximum bandwidth. Check to enable automatic traffic control.
 - **Maximum bandwidth:** In case of sharing other network programs or equipment, it is possible to set a limitation on the maximum bandwidth in the unit of Mbit/s or Kbit/s.
 - **Automatic frame rate:** Selected if not influenced by a network-related program or equipment without a limitation on the network bandwidth.
 - **Priority:** Select Framerate, Bitrate or Both as a priority to control the traffic.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

▼ NAT


A broadband router allows devices on a private network (LAN) to share a single connection to the Internet. This is done by forwarding network traffic from the private network to the “outside,” that is, the Internet. Security on the private network (LAN) is increased since most broadband routers are pre-configured to stop attempts to access the private network (LAN) from the public network/Internet.

Use NAT Traversal when your network cameras are located on an intranet (LAN) and you wish to make it available from the other (WAN) side of a NAT router. With NAT traversal properly configured, all HTTP traffic to an external HTTP port in the NAT router is forwarded to the network camera.

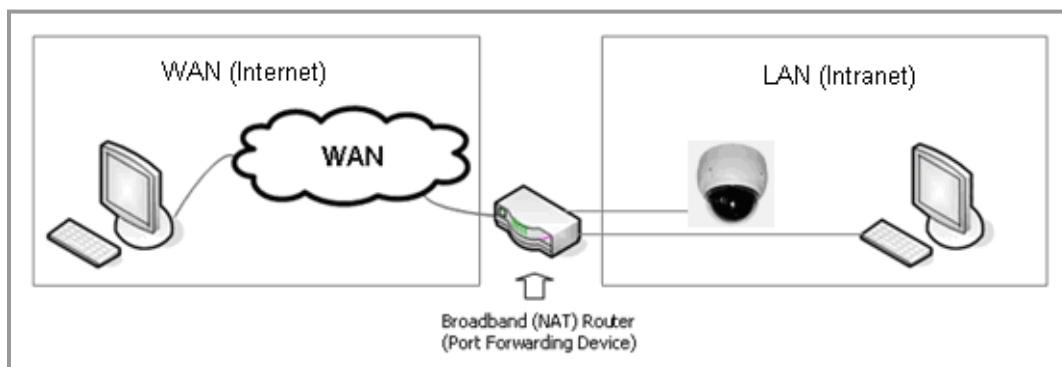

NOTES:

1. For NAT traversal to work, this must be supported by the broadband router.
2. The broadband router is known by many different names: “NAT router,” “Network router,” “Internet Gateway,” “Broadband sharing device” or “Home firewall” but the essential purpose of the device is the same.

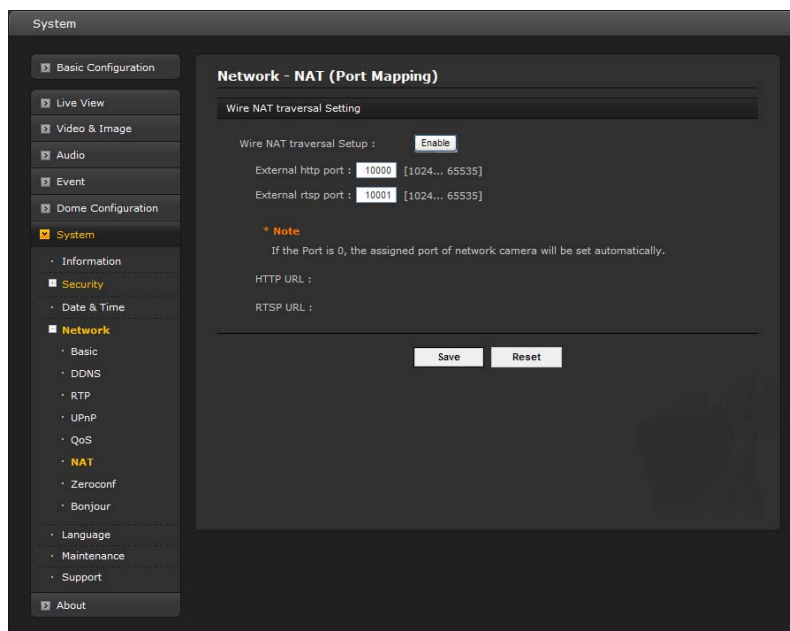

• NAT Settings

- **Enable:** Click this to Enable (or Disable) the NAT traversal setup. When enabled, the network camera attempts to configure port mapping in a NAT router on your network, using UPnP. Note that UPnP must be enabled in the network camera (see System>Network>UPnP).

- * **Automatic setting:** When selected, the network camera automatically searches for NAT routers on your network.
- * **Manual setting:** Select this option to manually select a NAT router and enter the external port number for the router in the field provided.


NOTES:

1. If you attempt to manually enter a port that is already in use, an alert message will be displayed.
2. When the port is selected automatically it is displayed in this field. To change this, enter a new port number and click Save.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

▼ Zeroconfig

Zeroconfig allows the network camera to create and assign the IP address for network cameras and connect to a network automatically.

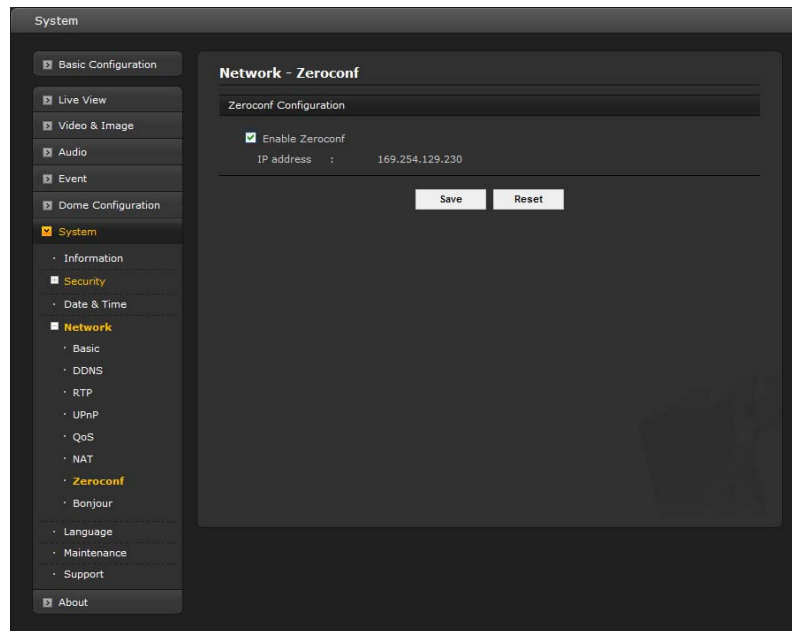

Zero configuration networking (zeroconf) is a set of techniques that automatically creates a usable [Internet Protocol](#) (IP) network without manual operator intervention or special configuration servers.

Zero configuration networking allows devices such as computers and printers to connect to a network automatically. Without zeroconf, a network administrator must set up services, such as [Dynamic Host Configuration Protocol](#) (DHCP) and [Domain Name System](#) (DNS), or configure each computer's network settings manually, which may be difficult and time-consuming.

Zeroconf is built on three core technologies:


- Assignment of numeric network addresses for networked devices ([link-local address](#) auto configuration)
- Automatic resolution and distribution of computer [hostnames](#) (multicast DNS)
- Automatic location of network services, such as printing devices through DNS [service discovery](#).

Click the checkbox to enable Zeroconfig.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

▼ Bonjour

The network camera includes support for Bonjour. When enabled, the network camera is automatically detected by operating systems and clients that support this protocol.

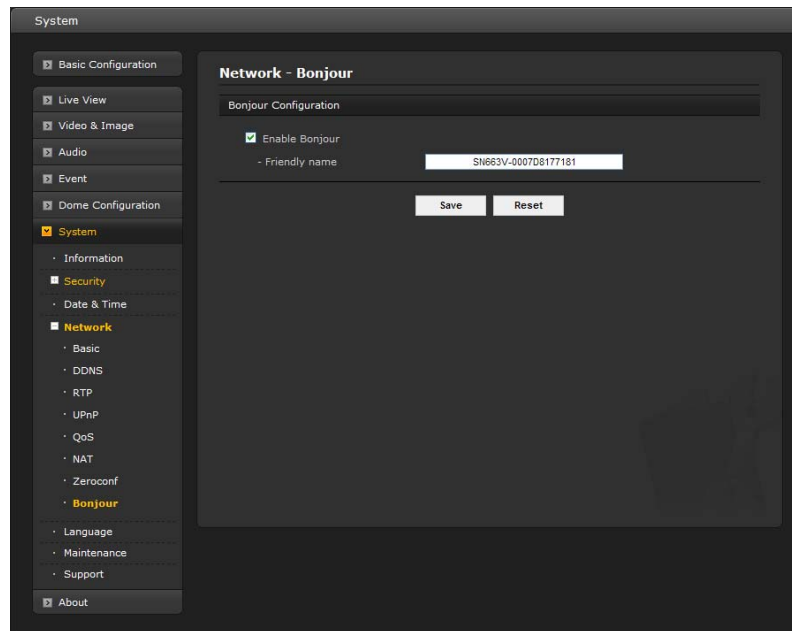


Click the checkbox to enable Bonjour.

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

NOTE: Bonjour - Also known as zero-configuration networking, Bonjour enables devices to automatically discover each other on a network, without having to enter IP addresses or configure DNS servers. Bonjour is a trademark of Apple Computer, Inc.


5) Language

Select the desired language, English, Russian or Korean.

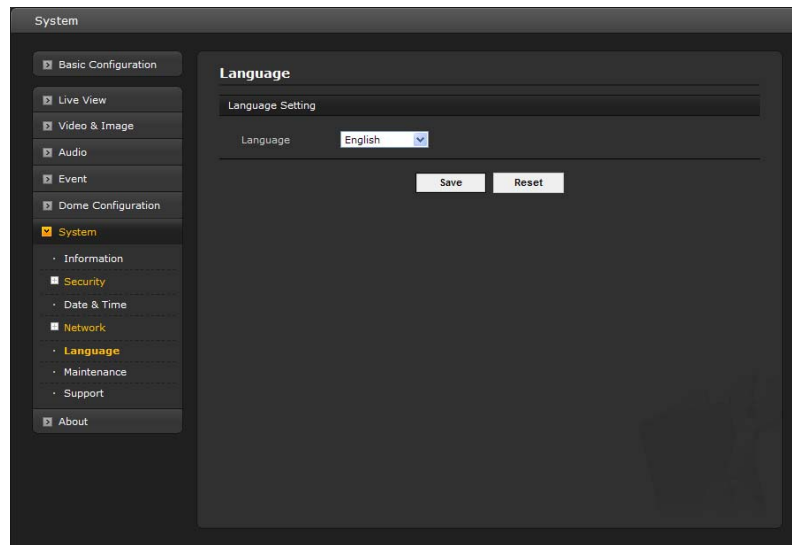

Click the **Save** button to save the settings, or click the **Reset** button to clear all of the information you entered without saving it.

6) Maintenance

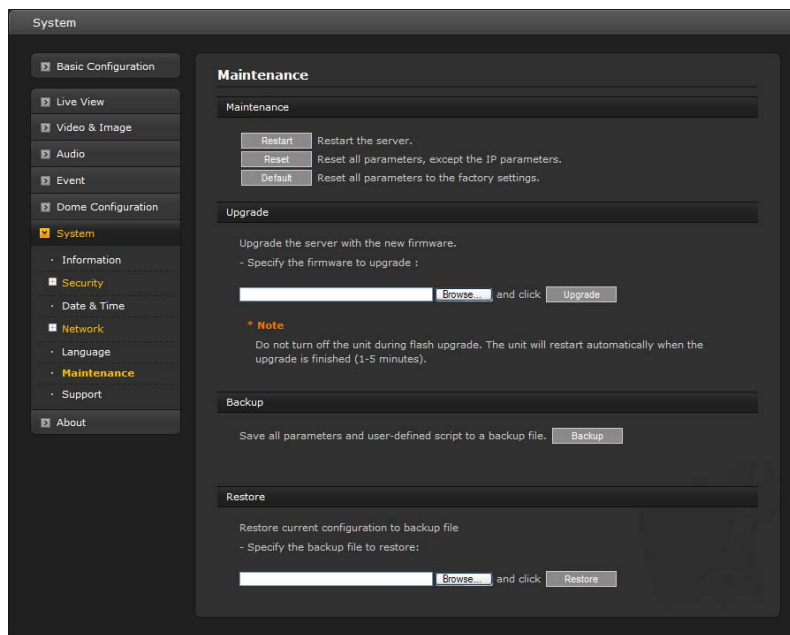

- **Maintenance:**


- **Restart:** The unit is restarted without changing any of the settings. Use this method if the unit is not behaving as expected.
- **Reset:** The unit is restarted and most current settings are reset to factory default values. The settings that are not affected are:
 - * the boot protocol (DHCP or static)
 - * the static IP address
 - * the default router
 - * the subnet mask
 - * the system time
- **Default:** The **Default** button should be used with caution. Pressing this will return all of the network camera's settings to the factory default values (including the IP address).

- **Upgrade:** Upgrade your camera by importing an upgrade file and pressing the **Upgrade** button. During the upgrade, do not turn off the power of the network camera. Wait at least five minutes and then try to access the camera again.
- **Backup:** Click the **Backup** button to save the setting values that users have entered to the network camera to a user PC.
- **Restore:** Click the **Restore** button to import and apply a setting value previously saved to a user PC.


NOTE: Backup and Restore can only be used on the same unit running the same firmware. This feature is not intended for multi-configurations or for firmware upgrades.

7) Support


The support page provides valuable information on troubleshooting and contact information, should you require technical assistance.

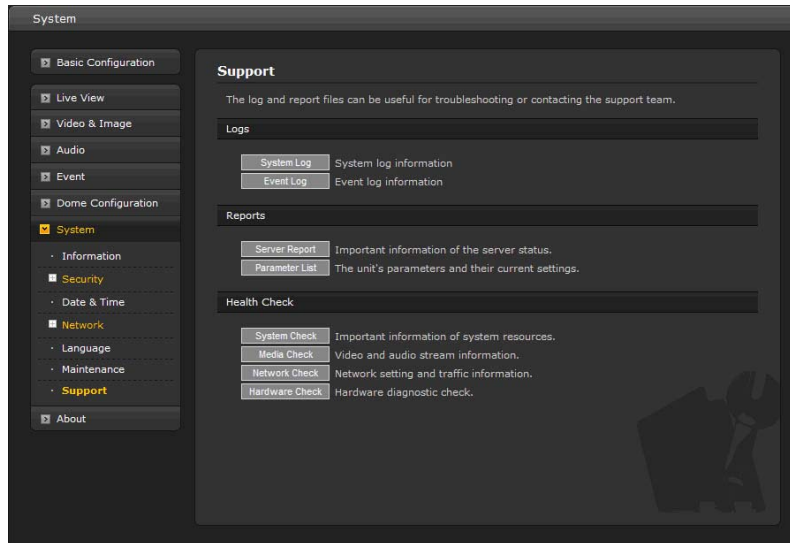

- **Logs:** The network camera supports system and event log information. Click the **System Log** button to get the system log data or the **Event Log** button to get information on events.
- **Reports:**
 - **Server Report:** Click the **Server Report** button to get the important information about the server's status; this should always be included when requesting support.
 - **Parameter List:** Click the **Parameter List** button to see the unit's parameters and their current settings.
- **Health Check:**
 - **System Check:** Click the **System Check** button to get the important information about the camera's system resources. The pop-up window below will display.

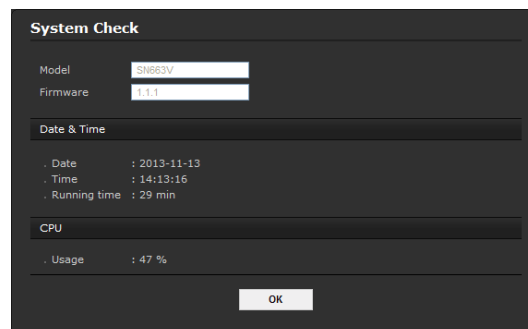

- **Media Check:** Click the **Media Check** button to get the information about the camera's video and audio stream. The pop-up window below will display.

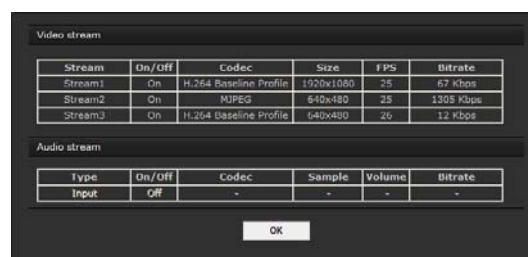

- **Networks Check:** Click the **Network Check** button to get the information about the camera's network setting and traffic. The pop-up window below will display.

Network Check

Wired configuration

. Current Status : Connected

. DHCP : On

. IP address : 192.168.1.100

. Subnet mask : 255.255.255.0

. Gateway : 192.168.1.254

. DNS : 168.126.63.1

Wireless configuration

. Current Status : Disconnected

Traffic

. Wired : 66 Kbps

Streaming service

. Number of users currently live : 0

. Number of users currently playback : 0

Server connection

. Live Push : Disconnected


. Event Push : Disconnected

OK

- **Hardware Check:** Click the **Hardware Check** button to diagnose the camera's hardware like video.

Hardware Check

Image



Connect

. Result: Successful

Speaker

. Test

Play

 . Result: Not Tested

Mic

. Test


Activate Mic

 . Result: Not Tested

OK

3.6 Help

The Help information window is provided as a popup window so that users can open and read it without needing to log-in. It offers a description of the setting and Help page, so that users can manipulate the network camera without having to reference the manual.

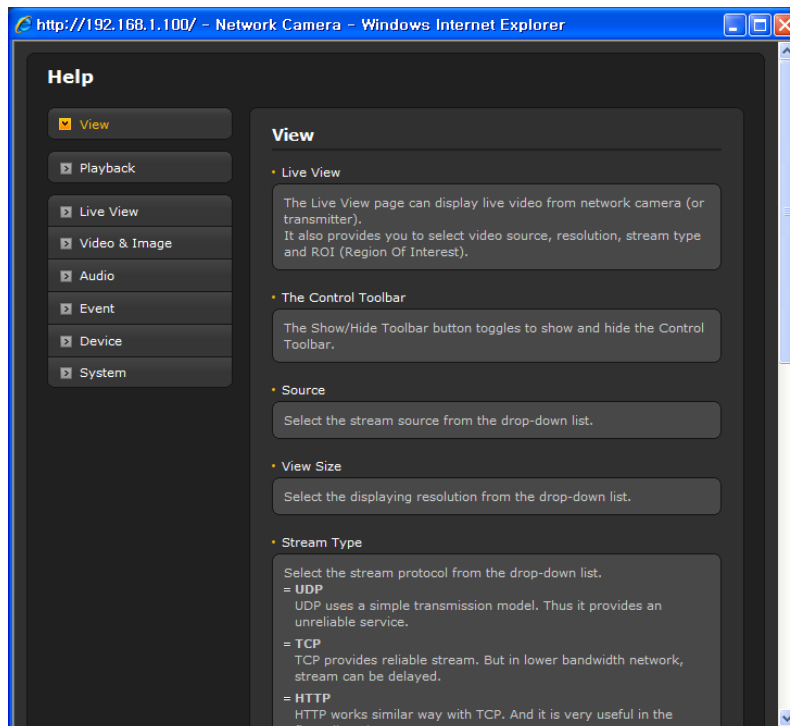

3.7 Resetting to the factory default settings

To reset the network camera to the original factory settings, go to the Setup > System > Maintenance web page (described in "3.5.7 System > Maintenance" of User's Manual) or use the **Reset** button on the network camera, as described below:

• Using the Reset button:

Follow the instructions below to reset the network camera to the factory default settings using the Reset button.

1. Switch off the network camera by disconnecting the power adapter.
2. Press and hold the Reset button (SW1) on the board with your finger while reconnecting the power.
3. Keep the Reset button (SW1) pressed for about 2 seconds.
4. Release the Reset button (SW1).
5. The network camera resets to factory defaults and restarts after completing the factory reset. The unit now obtains the IP address automatically via DHCP.

CAUTION: When performing a Factory Reset, you will lose any settings that have been saved.

4. Appendix


4.1 Troubleshooting

When troubleshooting if problems occur, verify the installation of the network camera with the instructions in this manual and with other operating equipment. Isolate the problem to the specific piece of equipment in the system and refer to the equipment manual for further information.

Problems/Symptoms	Possible Causes or Corrective Actions
The camera cannot be accessed by some clients.	If using a proxy server, try disabling the proxy setting in your browser. Check all cabling and connectors.
The camera works locally, but not externally.	Check if there are firewall settings that need to be adjusted. Check if there are router settings that need to be configured.
Poor or intermittent network connection.	If using a network switch, check that the port on that device uses the same setting for the network connection type (speed/duplex).
The camera cannot be accessed via a host name.	Check that the host name and DNS server settings are correct.
Not possible to log in.	When HTTPS is enabled, ensure that the correct protocol (HTTP or HTTPS) is used. When attempting to log in, you may need to manually type in http or https in the browser's address bar.
No image using Refresh and/or slow updating of images.	If images are very complex, try limiting the number of clients accessing the camera.
Images only shown in black & white.	Check the Video & Image setting.
Blurred images.	Refocus the camera.
Poor image quality.	Increased lighting can often improve image quality. Check that there is sufficient lighting at the monitored location. Check all image and lighting settings.
Rolling dark bands or flickering in image.	Try adjusting the Exposure Control setting under AE and AWB.
H.264 not displayed in the client.	Check that the correct network interface is selected in the Video & Image/Stream.
Multicast H.264 not displayed in the client.	Check with your network administrator that the multicast addresses used by the camera are valid for your network. Check that the Enable multicast checkbox are enabled in the System/Network/RTP tab. Checks with your network administrator to see if there is a firewall preventing viewing.
Multicast H.264 only accessible by local clients.	Check if your router supports multicasting, or if the router settings between the client and the server need to be configured. The TTL value may need to be increased.
Color saturation is different in H.264 and Motion JPEG.	Modify the settings for your graphics adapter. Refer to the adapter's documentation for more information.

4.2 Alarm Connection

The following connection diagram gives an example of how to connect a network camera.

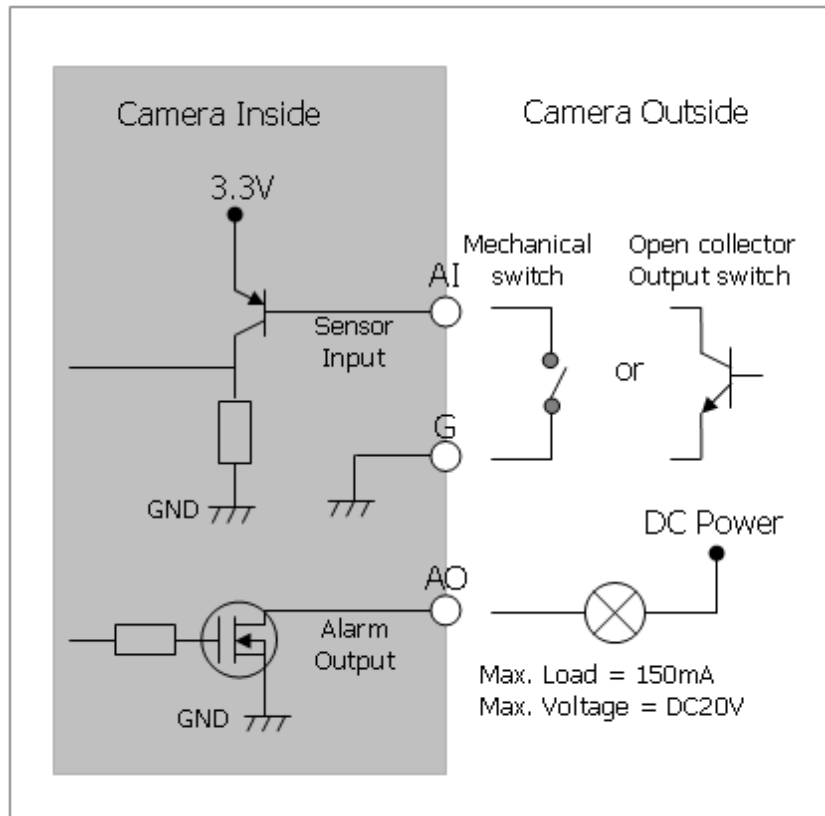

4.3 Preventive Maintenance

Preventive maintenance allows detection and correction of minor faults before they become serious and cause equipment failure.

Every three-month, perform the following maintenance.

1. Inspect all connection cables for deterioration or other damage.
2. Clean components with a clean damp cloth.
3. Verify that all the mounting hardware is secure.

4.4 Product Specification


SN663V IP Camera Dome

MODEL	12x
IMAGE	
Image Sensor	1/2.8" SONY Exmor CMOS
Optical/Digital Zoom	12x A/F Optical Zoom, 16x Digital Zoom
Scanning Mode	Progressive Scan
Min. Illumination	Color: 0.5 Lux, B/W: 0.1 Lux
AE/AWB	Yes
DNR	Yes
D&N	True D&N (IR-cut filter)
WDR	Yes
DIS	Yes
BLC	Yes
VIDEO	
Progressive Encoding	Yes
Compression	H.264 (BP/MP/HP), MJPEG
Resolution Supported	1920 x 1080p
Max. Frame Rate	1080p@60/50fps, 1080p@30/25fps
Multiple Streaming	Triple Stream (2x H.264 and 1x MJPEG)
IN/OUT	
Audio In/Out	In x 1/Out x 1 (G.711)
Alarm In/Out	In x 1/Out x 1
RS485	RS485
Ethernet	10/100Mbps
FEATURE	
Motion Detection	Yes
Event Buffering (Pre & Post)	Yes
Privacy Masking	Yes
PrVA (Pre-recorded Voice Alert)	Yes (3 files)
Video Analytics	Yes
Cross Web Browser	Yes
FTP Image Upload	Yes
ONVIF Certificate	Yes (Profile S)
SYSTEM	
Network Time Sync	Yes
Zero Configuration	Yes
Security	Password Protection, IP Filtering, HTTPS, SSL


NETWORK	
Max. Connections	10
Protocols	IPv4/IPv6, Manual, TCP/IP, UDP, HTTP, RTP, RTSP, NTP, DHCP, SMTP, DDNS, HTTPS, RTCP, FTP, Bonjour
NAS Support	Yes
JPEG push	Yes
DDNS	Yes
Remote Client	Web browser, SmartManager
Installation Tool	SmartManager
MISCELLANEOUS	
Weatherproof	IP66
PoE	802.3af Class 3
Power	PoE, 12 VDC, 24 VAC \pm 10%
Power Consumption	250mA (12W) @ PoE, 1.0A (12W) @ 12 VDC or 24 VAC
Operating Temperature	14°F to 122°F (-10°C ~ 50°C)
Operating Humidity	0 ~ 90% RH
External Dimension	See dimension drawing
Weight	Approx. 3.5 lb (1.6 kg) for dome
PTZ FUNCTION	
Pan Range	360° Endless
Pan Speed	Preset: Max. 380°/sec, Manual: Max. 380°/sec
Tilt Range	180° (0° ~ 180°)
Tilt Speed	Preset: Max. 380°/sec, Manual: Max. 300°/sec
Preset	240

* Specifications are subject to change without notice *


UNIT : mm

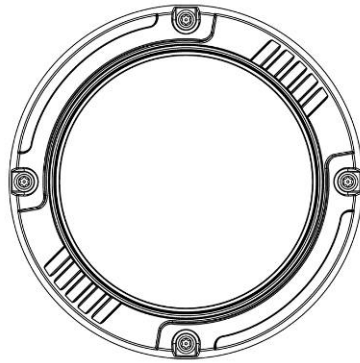

TOP VIEW

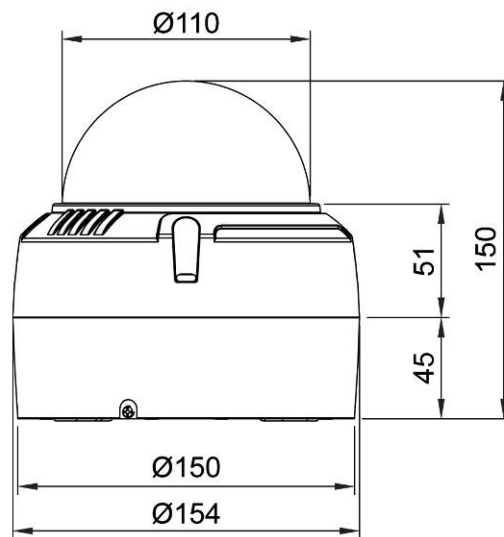

FRONT VIEW

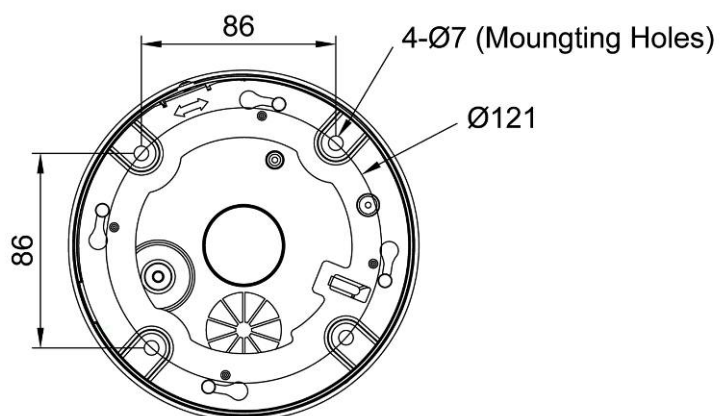

BOTTOM VIEW

Figure – Dimension

4.5 System Requirement for Web Browser

- **Operating System:** Microsoft® Windows® OS Series
- **CPU:** Intel® Core™ 2 Duo 2Ghz or higher, 1GB RAM or more, 10GB free disk or higher
- **VGA:** AGP, Video RAM 32MB or higher (1024x768, 24bpp or higher)

4.6 General Performance Considerations

When setting up your system, it is important to consider how various settings and situations will affect performance. Some factors affect the amount of bandwidth (the bit rate) required, others can affect the frame rate, and some affect both. If the load on the CPU reaches its maximum, this will also affect the frame rate.

The following factors are among the most important to consider:

- High image resolutions and/or lower compression levels (or high bitrates) result in larger images: Frame rate and Bandwidth are affected.
- Accessing both Motion JPEG and H.264 video streams simultaneously: Frame rate and bandwidth affected.
- Heavy network utilization due to poor infrastructure: Frame rate and Bandwidth affected.
- Heavy network utilization via wireless router due to poor infrastructure: Frame rate and bandwidth affected.
- Viewing on poorly performing client PCs lowers perceived performance: Frame rate affected.

Shipping Instructions

Use the following procedure when returning a unit to the factory:

1. Call or write Vicon for a Return Authorization (R.A.) at one of the locations listed below.
Record the name of the Vicon employee who issued the R.A.

Vicon Industries Inc.
131 Heartland Boulevard
Edgewood, NY 11717
Phone: 631-952-2288; Toll-Free: 1-800-645-9116; Fax: 631-951-2288

For service or returns from countries in Europe, contact:

Vicon Industries (U.K.) Ltd
Brunel Way
Fareham, PO15 5TX
United Kingdom
Phone: +44 (0)1489/566300; Fax: +44 (0)1489/566322

2. Attach a sheet of paper to the unit with the following information:
 - a. Name and address of the company returning the unit
 - b. Name of the Vicon employee who issued the R.A.
 - c. R. A. number
 - d. Brief description of the installation
 - e. Complete description of the problem and circumstances under which it occurs
 - f. Unit's original date of purchase, if still under warranty
3. Pack the unit carefully. Use the original shipping carton or its equivalent for maximum protection.
4. Mark the R.A. number on the outside of the carton on the shipping label.

Vicon Standard Equipment Warranty

Vicon Industries Inc. (the "Company") warrants your equipment to be free from defects in material and workmanship under Normal Use from the date of original retail purchase for a period of three years, with the following exceptions:

1. Monitors, all models: One year from date of original retail purchase.
2. Uninterruptible Power Supplies: Two years from date of original retail purchase.
3. VDR-700 Recorder Series: One year from date of original retail purchase.
4. V5616MUX: One year from date of original retail purchase.
5. Arecont Cameras: One year from date of original retail purchase.
6. FMC series fiber-optic media converters and associated accessories: Lifetime warranty.
7. For PTZ cameras, "Normal Use" excludes prolonged use of lens and pan-and-tilt motors, gear heads, and gears due to continuous use of "autopan" or "tour" modes of operation. Such continuous operation is outside the scope of this warranty.
8. Any product sold as "special" or not listed in Vicon's commercial price list: One year from date of original retail purchase.

Date of retail purchase is the date original end-user takes possession of the equipment, or, at the sole discretion of the Company, the date the equipment first becomes operational by the original end-user.

The sole remedy under this Warranty is that defective equipment be repaired or (at the Company's option) replaced, at Company repair centers, provided the equipment has been authorized for return by the Company, and the return shipment is prepaid in accordance with policy.

The Company will not be obligated to repair or replace equipment showing abuse or damage, or to parts which in the judgment of the Company are not defective, or any equipment which may have been tampered with, altered, misused, or been subject to unauthorized repair.

Software supplied either separately or in hardware is furnished on an "As Is" basis. Vicon does not warrant that such software shall be error (bug) free. Software support via telephone, if provided at no cost, may be discontinued at any time without notice at Vicon's sole discretion. Vicon reserves the right to make changes to its software in any of its products at any time and without notice.

This Warranty is in lieu of all other conditions and warranties express or implied as to the Goods, including any warranty of merchantability or fitness and the remedy specified in this Warranty is in lieu of all other remedies available to the Purchaser.

No one is authorized to assume any liability on behalf of the Company, or impose any obligations on it in connection with the sale of any Goods, other than that which is specified above. In no event will the Company be liable for indirect, special, incidental, consequential, or other damages, whether arising from interrupted equipment operation, loss of data, replacement of equipment or software, costs or repairs undertaken by the Purchaser, or other causes.

This warranty applies to all sales made by the Company or its dealers and shall be governed by the laws of New York State without regard to its conflict of laws principles. This Warranty shall be enforceable against the Company only in the courts located in the State of New York.

The form of this Warranty is effective May 4, 2012.

THE TERMS OF THIS WARRANTY APPLY ONLY TO SALES MADE WHILE THIS WARRANTY IS IN EFFECT. THIS WARRANTY SHALL BE OF NO EFFECT IF AT THE TIME OF SALE A DIFFERENT WARRANTY IS POSTED ON THE COMPANY'S WEBSITE, WWW.VICON-SECURITY.COM. IN THAT EVENT, THE TERMS OF THE POSTED WARRANTY SHALL APPLY EXCLUSIVELY.

Vicon Industries Inc.

Internet Address: www.vicon-security.com



SN663V IP Camera Dome

Rev.A